

User Guide

A decorative orange line graphic that starts from the left, curves upwards and to the right, then loops back to the left, ending near the Pantech logo.

PANTECH P9090

Thank you for choosing the Pantech P9090, our latest smartphone. The Pantech P9090 has many features designed to enhance your mobile experience. With its unique and stylish design you will enjoy the entire phone experience.

This User Guide contains important and useful information that will maximize your familiarity with all that this phone has to offer.



Some of the contents in this manual may differ from your phone depending on the software of the phone. Actual color may vary.

Your phone is designed to make it easy for you to access a wide variety of content. For your protection, we want you to be aware that some applications that you enable may involve the location of your phone being shared. For applications available through AT&T, we offer privacy controls that let you decide how an application may use the location of your phone and other phones on your account. However, the AT&T privacy tools do not apply to applications available outside of AT&T. Please review the terms and conditions and the associated privacy policy for each location-based service to learn how location information will be used and protected. In addition, your AT&T phone may be used to access the Internet and to download and/or purchase goods, applications, and services from AT&T or from third parties. AT&T provides tools for you to control access to the Internet and certain Internet content. These controls may not be available for certain devices which bypass AT&T controls.

Service provided by AT&T Mobility. Portions © 2012 AT&T Intellectual Property. All rights reserved. AT&T, the AT&T logo and all other AT&T marks contained herein are trademarks of AT&T Intellectual Property and/or AT&T affiliated companies. All other marks contained herein are the property of their respective owners.

Copyright © 2012. Pantech. All Rights Reserved.

1

READ THIS FIRST

Important Safety Information
Trademarks
On-screen Indicators



PANTECH
P9090



READ THIS FIRST

Important Safety Information

The following describes how to maintain and use your phone safely.

- Keep your phone and its accessories out of the reach of children and pets.
- Maintain your phone in dry conditions and keep it within normal operating temperatures.
- Temperatures higher than 131°F (55°C) or lower than -4°F (-20°C) may damage your phone.
- Do not attempt to dry your phone in a microwave oven. If you do, arcing can occur and cause an explosion or fire.
- Do not use or store your phone in dusty or dirty areas.
- Do not attempt to disassemble your phone.
- Do not drop or cause severe impact to your phone.
- Do not use chemical products, cleaning solvents or detergents to clean your phone.
- If your phone does not work properly, contact your dealer immediately.
- Use only authorized batteries, battery chargers and accessories. Any malfunction or damage caused by the use of unauthorized batteries, battery chargers and accessories will void the limited product warranty.
- Ensure that the battery and battery charger do not come into contact with conductive objects.
- For optimal phone performance, use cases and accessories that do not contain magnets that may come into close proximity with the phone.

Do not use a phone while driving

Please check local laws and regulations with regard to the prohibition of phone use while driving and comply with them. Use of your phone while you are driving may disturb your concentration and result in an accident. Always switch your phone off and drive safely. If you need to use your phone in an emergency, either use a hands-free device or pull over to a safe place first.

Switch off your phone in restricted areas

Always switch your phone off in areas where phone use is restricted.

Switch off in explosive or dangerous areas

Always switch your phone off in areas where there are explosive or dangerous materials (such as fuel, fuel stations or areas containing chemical goods) and obey any instructions or signs. Do not remove your phone battery in such areas.

Switch off your phone in an aircraft

Always switch your phone off when you are on board an aircraft. The electromagnetic waves emitted by your phone may affect the electronic navigation equipment in the aircraft.

Switch off your phone in hospitals and near medical equipment

Always switch your phone off in hospitals and obey the regulations of the hospital. Switch your phone off when using medical equipment that may be affected by electromagnetic waves emitted from the phone. Consult the medical equipment's manufacturer or an expert regarding phone use near the medical equipment.

Use caution when installing a hands-free device in your vehicle

Install hands-free devices in your vehicle with proper clearance from the steering wheel and airbag area. Failure to do so may result in injuries.

About the Battery Usage

Your phone is powered by a Lithium Ion (Li-Ion) battery. This type of battery typically has a longer lifespan than other types of batteries. However, it must be handled with care. Please read and follow these battery guidelines:

- Do not use a damaged battery or charger.
- Do not disassemble, open, crush, bend, deform, puncture or break up a battery.
- Do not modify or remanufacture, or attempt to insert foreign objects into the battery; or immerse or expose it to water or other liquids; or expose it to fire, explosion or other hazard.
- Dispose of and recycle used batteries in accordance with local regulations. Do not dispose of batteries by burning as they may explode. Do not use an unauthorized charger or battery.
- Do not put your battery into contact with conductive objects.
- Dispose of and recycle used batteries in accordance with local regulations. Do not dispose of batteries by burning; they may explode.
- Do not use an unauthorized charger.
- Only use the battery with a charging device that has been authorized for use with the device according to IEEE-Std-1725-2006. Use of an unauthorized or non-standard battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact the battery terminals.
- Replace the battery only with another battery that has been authorized for use with the device according to IEEE-Std-1725-2006.
- Use of a non-standard battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Children should not be allowed to handle the battery.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for checking.
- Use your battery for the specified purpose only.
- The farther you are from a network's base station, the more battery power will be consumed to maintain the connection.
- Battery recharging time varies depending on the remaining battery capacity and the battery and charger type you use.

READ THIS FIRST

- Battery life inevitably shortens over time.
- Overcharging may shorten the battery's life. Therefore, remove the phone from its charger once it is fully charged and unplug the charger. Avoid leaving the battery in hot or cold places, such as inside a car in summer or winter, as this may reduce the capacity and life of the battery. Always store the battery within normal operating temperatures.

Table of Contents

1. READ THIS FIRST

Important Safety Information	4
Trademarks.....	10
On-screen Indicators	11

2. GETTING STARTED

Layout.....	14
Inside the Package	15
Using the SIM or USIM Card.....	15
Using the Battery.....	16
Installing an Optional microSD Card	18
Turning the Phone On or Off.....	18
Setting Up the Phone.....	19
Resetting the Phone	19
Locking the Screen.....	20
Unlocking the Screen.....	20
Using the Touch Screen.....	23
Entering Text.....	25

3. PHONE EXPERIENCE

About the Phone Experience	28
Setting the Phone Experience	28
Learning to Use the Pantech Easy Experience	29

4. BASIC OPERATIONS

Understanding the Home Screen.....	32
Customizing the Home Screen.....	33
Using the Extended Launcher Bar.....	36
Using the Task Manager	37
Using the Applications Menu.....	38
Using Motion Commands.....	39
Connecting to the Internet.....	41
Sharing the Internet Connection	42
Setting up a Bluetooth Connection	43
Using Bluetooth.....	43
Installing or Uninstalling Applications	45

5. CALLING & MESSAGING

Calling.....	47
Managing Contacts.....	49
Messaging.....	52

6. COMMUNICATION

Using the Internet	55
Setting Up Email Accounts	56
Using Email	57
Setting Up a Google Account.....	58
Using Gmail.....	59
Using Google+.....	60

READ THIS FIRST

Using Social World.....	61
Using Social Gallery	63
Using Facebook.....	64
Using Twitter	64
Using Talk	64

7. MEDIA CENTER

Using the Camera.....	66
Capturing the Screen	69
Using the Gallery	70
Downloading Music or Video Files from a computer	71
Using the Music Player.....	72
Using Play Music	73
Using MOG Music	74
Using the Video Player.....	74
Using Play Movies & TV	75
Enjoying YouTube.....	75

8. MENU FUNCTIONS

Alarm/Clock.....	78
Calculator	78
Calendar.....	79
Chrome.....	79
Converter.....	79
Downloads	80
File Manager	80

Latitude	80
Local.....	82
Maps.....	82
Navigation	82
Net Media	83
Notepad	86
Pill Reminder	87
Play Books.....	87
Play Magazines.....	87
Smart beam.....	88
Smart Voice	88
Tip Calculator.....	88
ThinkFree Office.....	88
Voice Recorder	89
Weather.....	90

9. AT&T SERVICES

Amazon Kindle	92
AT&T Code Scanner.....	92
AT&T DriveMode.....	92
AT&T FamilyMap.....	92
AT&T Locker.....	93
AT&T Navigator	93
AT&T Ready2Go.....	93
AT&T Smart Wi-Fi.....	93

Live TV	94
Device Help.....	94
YPmobile	94
myAT&T.....	94
Messages	94

10. SETTINGS

Pantech Settings	96
Wireless & Networks	96
Device.....	99
Personal	101
System.....	104

11. APPENDIX

Cautions when Using External Memory Cards.....	109
Troubleshooting Checklist	109
Specifications	110
Caution	111
FCC Hearing-Aid Compatibility Regulations for Wireless Devices ..	111
FCC Regulatory Compliance	112
Limited Warranty.....	114
Legal Notice.....	116

Trademarks



DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX videos.

About DivX Video-On-Demand

This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified® to play DivX® video up to HD 720p, including premium content.

DivX®, DivX Certified®, and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under licence.

Covered by one or more of the following U.S. patents:
7,295,673; 7,460,668; 7,515,710; 7,519,274



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS, the Symbol, & DTS and the Symbol together are registered trademarks & DTS 2.0 Channel is a trademark of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

On-screen Indicators

Icon	Description
	A call is in progress.
	Missed call
	Call on hold
	A call is in progress using a Bluetooth device.
	Microphone muted
	The speakerphone is active.
	New voicemail
	New SMS message
	New MMS message
	New Email
	New Google Talk message
	No SIM or USIM card
	Silent mode is active.
	Vibrate mode is active.

Icon	Description
	Drive mode is active.
	An error has occurred.
	Motion recognition is active.
	An alarm has been set.
	Timer has been set.
	Music is playing.
	Another device is attempting to play back content.
	Data manager is connected.
	The GPS is active.
	Synchronization in progress
	Downloading data
	Uploading data
	Connected to a Bluetooth device
	Bluetooth is active.

READ THIS FIRST

Icon	Description
	Wi-Fi signal strength
	Portable Wi-Fi hotspot is active.
	USB tethering is active.
	Bluetooth tethering is active.
	Connected to a computer via a supported USB cable connection
	USB debugging mode is active.
	Smart Beam is active.
	Connected to the LTE 4G network
	Signal strength: The number of bars increases when the signal is strong.
	No signal
	Airplane mode is active.
	Battery level: The more green filled up, the more charge that is remaining.
	The battery is charging.

2

GETTING STARTED

Layout

Inside the Package

Using the SIM or USIM Card

Using the Battery

Installing an Optional microSD Card

Turning the Phone On or Off

Setting Up the Phone

Resetting the Phone

Locking the Screen

Unlocking the Screen

Using the Touch Screen

Entering Text




PANTECH
P9090



GETTING STARTED

Layout


Front View

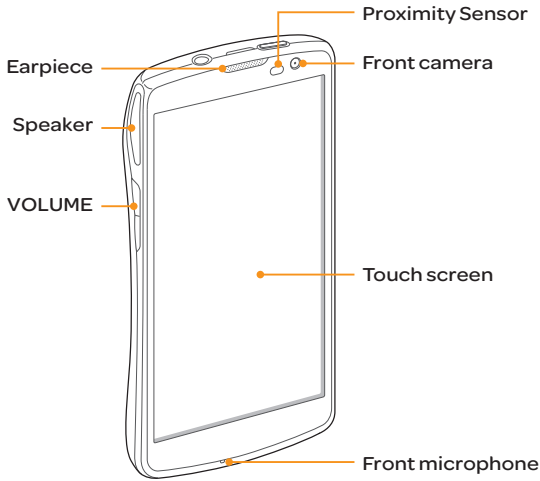

Key	Function
VOLUME	Adjust sound volume. Adjust the ring mode.

① **Note** Do not cover the proximity sensor area with LCD protection film. If you cover the sensor, the touch screen may not perform properly.

Rear View

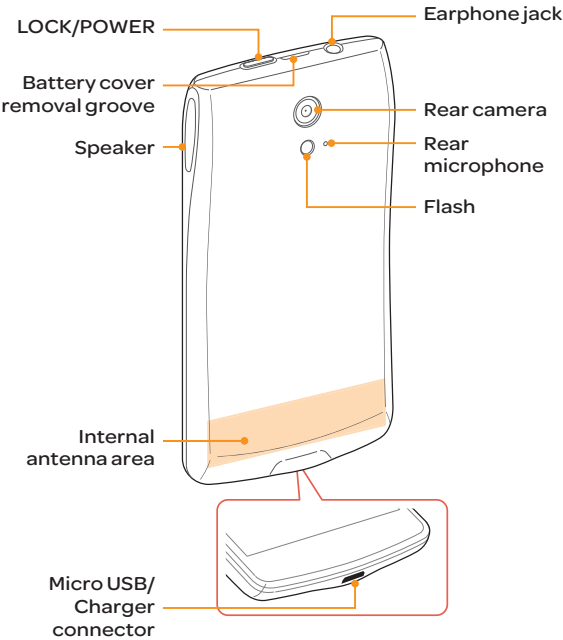


Key	Function
LOCK/PWR	Lock the screen. Turn the phone on or off.

Note

- Your phone may not be compatible with all types of stereo earphones.
- Do not allow the touch screen to come in contact with water or chemicals.
- Do not cover the internal antenna embedded in the phone.
- Do not hold the phone too close to your face, as you may block the microphone and prevent others from hearing you clearly.

Gripping the Phone

Hold the phone in the correct position to avoid covering the internal antenna.

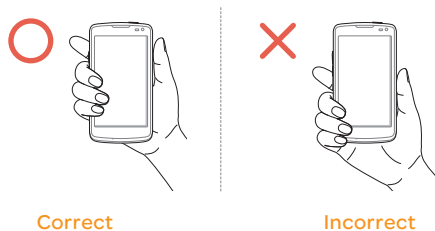**Note**

- If you cover the internal antenna, you may disrupt the wireless signal and increase battery consumption.
- Do not use metallic cases or accessories, as they can interfere with the signal reception.

Inside the Package

Check your product package for the following items:

- Phone
- Battery
- Adapter
- USB cable
- Quick Start Guide


Using the SIM or USIM Card

Before Using the Card

- Be careful not to damage your fingernails when you remove the battery cover.
- Turn off the phone before installing the SIM or USIM card.
- Do not bend or force the card. Doing so may damage the card or destroy data on the card.
- Turn off the phone before removing the SIM or USIM card.
- Do not expose the SIM or USIM card to moisture.
- Avoid static electricity.
- Do not lose or transfer your SIM or USIM card to someone. Pantech is not responsible for damage due to theft or loss.

Installing the SIM or USIM Card

1. Insert your fingernail into the groove at the top of the phone, and then lift up to remove the battery cover.
2. Remove the battery.
3. Insert the SIM or USIM card into the card slot. Ensure that the gold contacts on the card are facing the metal contacts on the phone.

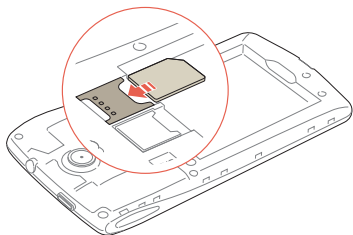

4. Reinsert the battery and reattach the battery cover.


About SIM or USIM Cards

When you sign up for phone service, you will receive a SIM or USIM card that contains your registration information, PIN code, and other personal data. Keep the card secure and handle it carefully. Do not bend or scratch the card and keep it away from moisture and static electricity. Pantech is not responsible for damages of your personal data due to theft or loss.


Using the Battery

Inserting the Battery


1. Turn off the phone, if it is not already turned off.
2. Insert your fingernail into the groove at the top of the phone, and then lift up to remove the battery cover.

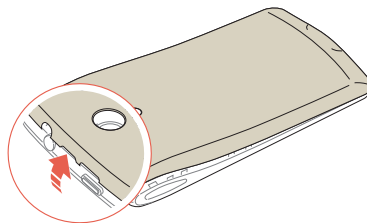

3. Align the gold contacts on the battery with the contacts located at the top of the battery compartment.

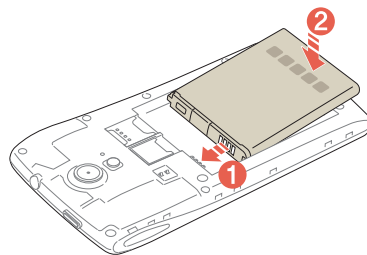

4. Slide the battery into the phone until it lays flat in the compartment.
5. Reattach the battery cover.

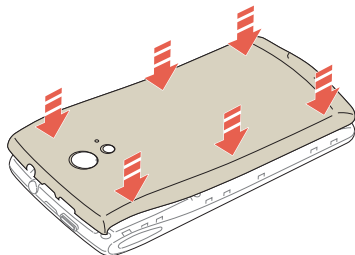


① **Note** Be careful not to damage your fingernails when you remove the battery cover.

About the Battery

Your battery uses a lithium ion (Li-Ion) battery. Use only approved batteries and chargers with your phone. The average battery life will vary, based on your usage behaviors. For more details, contact your dealer.

Charging the Battery

Insert the plug into a power outlet, and then connect the charger adapter to the Micro USB/Charger connector of the phone.

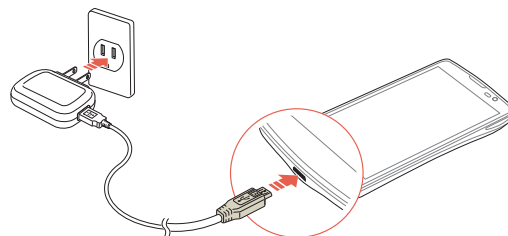


① **Note**

- Do not use the phone while the battery is charging. Doing so may result in an electric shock.
- Use only authorized adapters. Using unauthorized adapters may cause the phone to malfunction or may damage the phone or battery.
- Carefully align the connector as indicated in the image. Failure to do so may damage the charger connector or prevent the battery from charging.

Installing an Optional microSD Card

Insert a microSD card to store files, such as photos or videos.

1. Insert your fingernail into the groove at the top of the phone, and then lift up to remove the battery cover.
2. Remove the battery.
3. Insert the microSD card into the memory card slot. Ensure that the gold contacts on the card face the metal contacts on the phone.

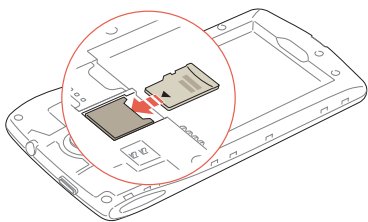

4. Reinsert the battery and reattach the battery cover.


About the microSD Card

Inserting a microSD card allows you to store files and application data. You can use up to a 32 GB microSD card. We recommend that you format the microSD card before using it.

Turning the Phone On or Off

Turning the Phone On

Press and hold the LOCK/PWR key for more than two seconds.

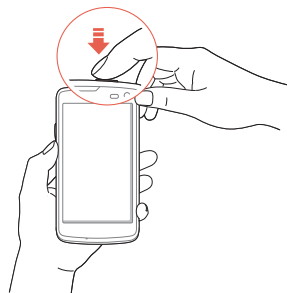

Turning the Phone Off

1. Press and hold the LOCK/PWR key for more than two seconds.
2. Tap **Power off** > **OK**.

① **Note** If you forcibly shut down the phone by removing the battery, the screen may malfunction shortly. This is normal and should not affect the lifespan of the screen.

Restart the Phone

1. Press and hold the LOCK/PWR key for more than two seconds.
2. Tap **Restart** > **OK**.

Setting Mute Mode

Press and hold the LOCK/PWR key for more than two seconds, and then tap . All sounds except multimedia and alarms are silenced.

Setting Vibrate Mode

Press and hold the LOCK/PWR key for more than two seconds, and then tap .

Setting Airplane Mode

Press and hold the LOCK/PWR key for more than two seconds, and then tap **Airplane mode** to turn off Wi-Fi and Bluetooth functions. You can reactivate these functions individually, if desired.

Setting Up the Phone

When you turn on the phone for the first time, a welcome screen appears. To set up the phone online, you must set up Ready2Go. To use Google applications and services, you must create or sign into a Google account. You can synchronize Contact, Calendar, and Gmail data for each account if you register multiple accounts.

1. Tap **Get Started** to use Ready2Go.
 - Tap **Cancel** if you want to use Ready2Go later. You can set up Ready2Go by tapping  > **AT&T Ready2Go**.
2. Select and tap a language, and then tap **START**.
3. Select and tap a phone experience, and then tap **Next**.
 - Your phone provides two experiences, Pantech Easy and Standard. For details about how to change the phone experience, refer to page 27.

4. Tap **Connect to Wi-Fi network**, and then select and tap an available Wi-Fi network.
 - Tap **Skip**, and go to step 6 to connect to the network later.
5. Follow the necessary steps, and then tap **Next**.
6. Tap **Tap to set up Google account** to set up a Google account, and then follow the necessary steps.
 - Tap **Skip** to set up an account later.
7. Tap **Location service** to use Google location, and then tap **Agree** for Location consent.
 - Go to step 8 if you do not want to use Google location.
8. Tap **Finish**.
9. Read the notice for recycling your phone, and then tap **OK**.

Resetting the Phone


Email, Google account information, and contacts will also be deleted when you reset the phone. Before you reset the phone, back up your contacts, messages, photos, and other data.

1. Tap  > **Settings** > **Backup & reset**.
2. Tap **Factory data reset**.
3. Tap **Reset phone**.
4. Tap **Erase everything**.

① **Note** If you reset the phone, all data saved on the phone will be lost.

Locking the Screen

Press the LOCK/PWR key briefly to lock the screen.

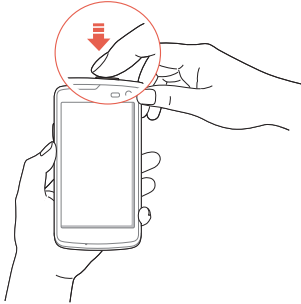

Changing the Screen Lock Type

1. Tap  > **Settings**.
2. Tap **Security** > **Screen lock**.
3. Select and tap a screen lock type.

Setting an Unlock Pattern, PIN, or Password


You must connect at least four dots for a pattern lock, enter at least four numbers for a PIN lock, or enter a password that is at least four characters long (at least one character must be a letter).

1. Tap  > **Settings** > **Security** > **Screen lock**.
2. Select and tap a lock type, and then follow the on-screen instructions.
 - Tap **None** to disable the screen lock.

Unlocking the Screen

Unlocking the Screen with a Pattern

1. Press the LOCK/PWR key if the phone is automatically locked.
2. Draw a pattern on the screen.

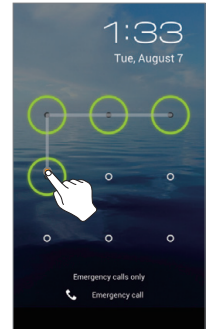

① **Note** You can make emergency calls without having to unlock the screen.

If You Forget Your Pattern

If you draw an incorrect pattern for more than five times in a row, you will not be able to retry for 30 seconds. When this happens, you can unlock the phone by entering your Google account information.

If you draw an incorrect pattern for more than 20 times, you must do one of the following to unlock the device:

If you registered a Google account:

Enter your account information.

If you did not register a Google account:

Visit the Pantech website.

Visit a Pantech Service Center.

① **Note** For more details about registering your Google account, refer to page 58.

Unlocking the Screen with a PIN or Password

1. Press the LOCK/PWR key if the phone is automatically locked.
2. Enter your PIN or password, and then tap **OK**.



① **Note** You can make emergency calls without having to unlock the screen.


If you Forget Your PIN or Password

Visit a Pantech Service Center to unlock the phone.

Unlocking the Phone with the Visual Lock

When the phone is not in use for specified length of time or the LOCK/PWR key is pressed, the screen turns off and phone locks automatically.


1. Press the LOCK/PWR key.
2. Tap and drag  to .
- You can also drag an application shortcut to  to unlock the screen and launch the application.

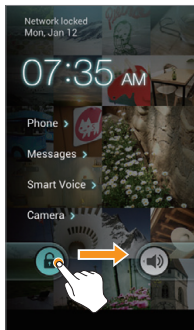

Unlocking the Phone with the Slide Lock

When you do not use the phone for a specified length of time or press the LOCK/PWR key, the screen turns off and the phone locks automatically.

1. Press the LOCK/PWR key.
2. Tap and drag  to .
- You can also tap and drag  to  to unlock the screen and launch the camera application.

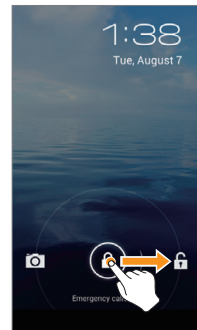

To Add a Screen Lock Wallpaper

Tap  > **Settings** > **User theme** > **Screen lock** > **Wallpaper**, select a folder that contains images, and then tap **Save**. If you do not select a folder, only the default image will appear.

To Change Screen Lock Shortcuts

Tap  > **Settings** > **User theme** > **Screen lock** > **Shortcuts**. You can change the shortcuts to your favorite applications on the locked screen.

Unlocking the Phone with the Modern Lock

When you do not use the phone for a specified length of time or press the LOCK/PWR key, the screen turns off and the phone locks.

1. Press the LOCK/PWR key.
2. Tap and drag  into the circle.
 - You can also drag an application shortcut into the circle to unlock the screen and launch the application.



To Add a Screen Lock Wallpaper

Tap  > **Settings** > **User theme** > **Screen lock** > **Wallpaper** > a category > an image.

Note

- If you select an image from Gallery, you can crop the image to set as wallpaper.
- If you select **Home wallpaper image**, the default image will appear.

To Change Screen Lock Shortcuts

Tap  > **Settings** > **User theme** > **Screen lock** > **Shortcuts**. You can change the shortcuts to your favorite applications on the locked screen.

Using the Touch Screen


About the Touch Screen

- Do not subject the touch screen to strong impacts.
- Do not use sharp tools that can scratch the touch screen.
- Do not allow the touch screen to come in contact with water or chemicals.
- Do not sit on the phone. Doing so may damage the touch screen.


Performing Touch Screen Commands

- **Tap:** Tap once to access a menu or an option.
- **Drag:** Tap and hold your finger on an item, and then move your finger without releasing it from the screen.
- **Flick:** Place a finger on the screen and slide it up, down, left, or right.
- **Pinch:** Place two fingers on the screen, and then spread them apart to zoom in, or squeeze together to zoom out.
- **Select and tap:** Tap an item in a list.
- **Tap and hold:** Touch and hold an area for a few seconds.


GETTING STARTED

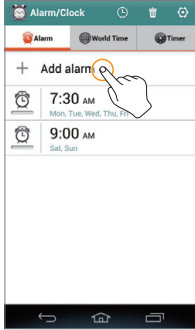

Tap

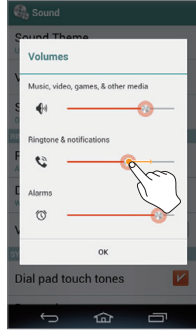


Drag

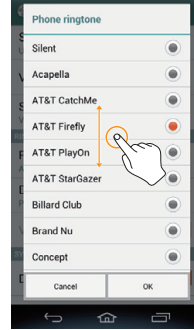

Select and tap



Tap and hold

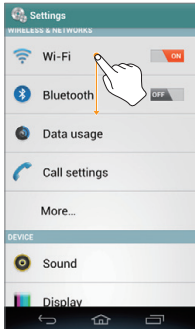

Flick




Pinch

Entering Text


Entering Text with the Android Keyboard

Enter text with the keypad at the bottom of the screen. The keyboard shows word suggestions as you enter. Tap a word to use it.

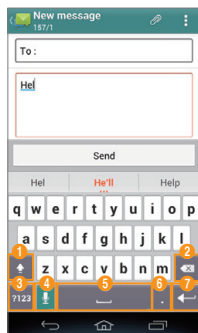

Entering Text with SwiftKey for Pantech

SwiftKey predicts what you want to enter before you enter your text. SwiftKey learns new words as you enter them, and suggests those words in its future predictions. Tap one of the three word suggestions above the keyboard to select a prediction.

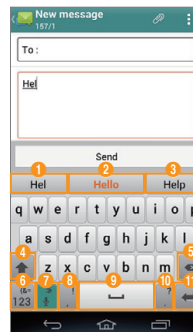

No.	Description
1	Change the case.
2	Clear your input.
3	Switch between ABC and Number/Symbol mode.
4	Switch to Voice mode. Tap and hold to select an input method or access the settings.
5	Insert a space. Tap and hold to select an input method.
6	Insert a period.
7	Start a new line.

No.	Description
1	Actual characters entered.
2	Primary SwiftKey prediction. Tap on the word or tap space to enter (depending on your spacebar settings).
3	Secondary SwiftKey prediction. Tap on the word to enter.
4	Change the case.
5	Clear your input.
6	Switch between ABC and Number/Symbol mode.

GETTING STARTED

No.	Description
7	Switch to Voice mode. Tap and hold to select an input method; configure the settings; share SwiftKey via Gmail, Twitter, or more; view support.
8	Insert a comma.
9	Insert a space.
10	Insert a period.
11	Start a new line.

Entering Text with Your Voice

Use your voice to enter text with the Voice to Text function.

1. Tap  or  on the keyboard.
2. Speak clearly into the microphone.

Editing Text

1. Tap and hold a word that you want to copy or cut.
2. Drag the handles to adjust the selection.
 - Tap  to select all text.
3. Tap  (cut) or  (copy).
4. Tap the point where you want to paste the text.
5. Tap the handle, and then tap **PASTE**.



Adding a Word to the User Dictionary

Add frequently-used words to the user dictionary for later use. You cannot add words that are already registered in the word suggestion list.

1. Enter a word in the text input field.
2. Tap the word in the word suggestion list.
3. Tap the word again to add to the user dictionary.
4. Tap **add to dictionary** > **OK**.

To Insert a Word from the User Dictionary

Enter a few characters of the word, and then tap the word when it appears in the word suggestion list.

3

PHONE EXPERIENCE

About the Phone Experience
Setting the Phone Experience
Learning to Use the Pantech Easy Experience



PANTECH
P9090



PHONE EXPERIENCE

About the Phone Experience

Your phone provides two phone experiences, Pantech Easy and Standard. The Pantech Easy Experience provides an easy-to-use interface that helps you to use the phone more simply. The Standard Experience is recommended for general users. The instructions in this manual are based on the Standard Experience.



Pantech Easy Experience



Pantech Standard Experience

Setting the Phone Experience

When you turn on the phone for the first time and set it up, you are asked to select a phone experience. You can change the phone experience at anytime in the Settings menu.

Changing the Phone Experience

If you are using Pantech Easy Experience, tap  > **Games & Apps > Pantech Standard Experience > OK.**

If you are using Pantech Standard Experience, tap  > **Pantech Easy Experience > OK.**

① **Note** Some functions and menus are not available in Pantech Easy Experience.

Learning to Use the Pantech Easy Experience

Learn how to use the functions and menus in Pantech Easy Experience.


Layout of the Home Screen



No.	Description
1	Drag the area at the top of the screen downward to access Quick settings or view battery usage, current time and date, your phone number, signal strength, or ongoing events.
2	View the current time, date, and temperature.
3	Access the web.
4	Open Quick Contacts.
5	Open shortcuts for applications.

No.	Description
6	Make calls.
7	Take pictures and record videos.
8	Send and receive messages.
9	Open menus.

Menu Items in Pantech Easy Experience

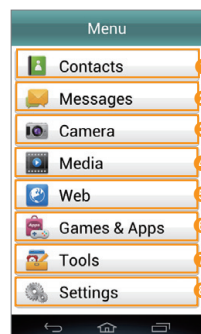

No.	Description
1	View contacts.
2	Send and receive messages.
3	Take pictures and record videos.
4	Launch Gallery, Music, ThinkFree Office, or Videos.
5	Access the web.
6	Play games or launch applications.

No.	Description
7	Launch Alarm/Clock, Calculator, Calendar, Converter, File Manager, Notepad, Pill Reminder, Tip Calculator, or Voice Recorder.
8	Access the settings (refer to page 95).

Locked Screen for the Pantech Easy Experience



Switch on to unlock the screen.

4

BASIC OPERATIONS

- Understanding the Home Screen
- Customizing the Home Screen
- Using the Extended Launcher Bar
 - Using the Task Manager
 - Using the Applications Menu
 - Using Motion Commands
- Connecting to the Internet
- Sharing the Internet Connection
- Setting up a Bluetooth Connection
 - Using Bluetooth
- Installing or Uninstalling Applications



PANTECH
P9090

BASIC OPERATIONS

Understanding the Home Screen

Layout of the Home Screen

The Home screen is the starting point for using applications. Here you can access widgets, shortcuts, or folders. The Home screen consists of three panels. When you access the Home screen for the first time, you will be shown usage tips for the Home screen.




No.	Description
1	Notification bar View the phone's status, battery usage, current time, and more.

No.	Description
	Home screen - Flick to the left or right to move to another panel. There is a panel to the left and to the right. 2 Spread your fingers apart to hide icons. Pinch your fingers to show icons again. - Pinch your fingers together to edit the Home screen.
	Panel location bar 3 View the number of panels and the location of the current panel. - Drag the white line to move to another panel. - Tap the line below a panel to switch to that panel.
	Basic launcher bar - View shortcut icons and the applications menu icon. 4 Tap a shortcut to run an application. - Tap to open the Menu screen. - Flick to the left or right to view the Extended launcher bar.
	Extended launcher bar 5 View shortcut icons and folders. - Tap a shortcut to launch an application. - Tap a folder to open it.
	Navigation buttons (Back): Return to the previous screen. 6 (Home): Return to the Home screen. (Recent applications): View a list of recently-accessed applications. 7 Access the Home screen options.

Navigating the Quick Settings, Settings Shortcuts, and Notification Screen

The Quick settings, Settings shortcuts, and Notification screens help you manage important functions easily and keep the following functions such as events, network, GPS, sound settings, and launching applications. Drag the area at the top of the screen downward.

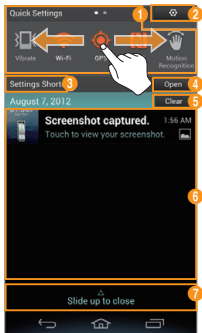

No.	Description
1	Quick settings Turn on or off Vibrate mode, Wi-Fi, GPS, NFC, Motion recognition, Bluetooth, data connection, mobile hotspot, or Auto rotate.
2	Access the settings.

No. Description

Settings shortcuts

- 3 Access the settings for sound, Wi-Fi, display, Bluetooth, motion recognition, lock, mobile hotspot, application management, or synchronization.
- 4 Close or open the Settings shortcuts.
- 5 Clear all notifications.

Ongoing events or notifications

- 6 View running applications, notifications for application updates, missed calls, new emails, or new messages.
- 7 Drag it upward to close the screen.

Customizing the Home Screen


Adding a Widget or Shortcut

1. On the Home screen, tap and hold an empty area.
 - You can also flick the Home screen upward or tap **1**.
2. Tap **Widget**.



BASIC OPERATIONS

3. Tap and hold an item
4. Drag it to the desired location.
 - Tap an item to align it with other icons automatically.

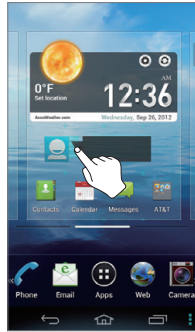


3. Release your finger when a folder is created.



Adding a Folder

Add a folder that contains shortcuts or application icons to the Home screen.

1. On the Home screen, tap and hold an icon.
2. Drag it onto another icon.

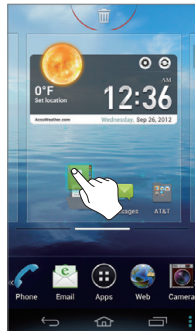


① Note

- Open the folder and tap  to change the title or color of the folder.
- Tap  to close the folder.


Arranging an Icon, Widget, or Folder

1. On the Home screen, tap and hold an item.
2. Drag it to a desired location.
 - To delete an item, drag it to  at the top of the screen.

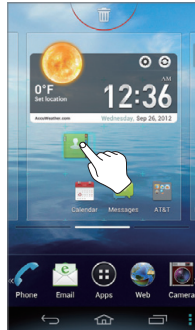

Arranging a Panel


1. On the Home screen, pinch your fingers together.
2. Tap and hold a panel.
3. Drag it to a desired location.
 - To delete a panel, drag it to  at the top of the screen.
 - Tap **New Panel** to add a new panel. You can create up to seven panels.

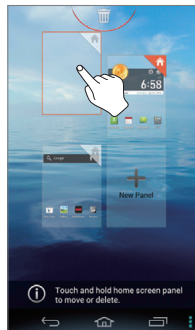

 **Note** To set a panel as the primary panel for the Home screen, tap .

Setting the Home Screen Wallpaper

1. On the Home screen, tap and hold an empty area.
 - You can also flick the Home screen upward or tap .
2. Tap **Wallpaper**.
3. Tap **Wallpapers**.
 - Tap **Live Wallpapers**, **Gallery**, or **Downloaded Wallpapers** to use images from other sources.
4. Tap a wallpaper > **Set Wallpaper**.
 - When you tap a wallpaper in the **Gallery** tab, you can crop the image.

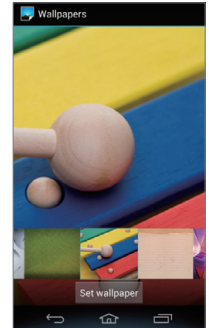

Changing the Home screen Theme

1. On the Home screen, tap and hold an empty area.
 - You can also flick the Home screen upward or tap .
2. Tap **Themes**.
3. Flick the screen to the left or right.
4. Select a theme.
5. Tap **Apply**.
 - Tap  to edit the theme name.
 - Tap  to delete the theme.



Using the Extended Launcher Bar

Arranging Shortcut Icons or Folders

Move shortcut icons or folders from the Home screen to the Extended launcher bar.

1. Flick the Basic launcher bar to the left or right.
2. Tap and hold an item on the Home screen.
3. Drag it to a desired location.
 - To delete an item, drag it to  at the top of the screen.




Using the Task Manager

Accessing Recently-used Applications

Use the Task Manager to access recently-used applications.


1. Tap .
2. Tap an application.
 - Flick the application to the left or right to delete it from the list.
 - Tap and hold the application to delete it from the list or view the application information.

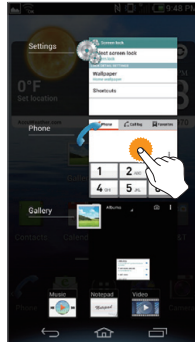

Closing Running Applications

If you launch an application and do not close it with the Task Manager, the application remains active even when you switch to the Home screen or launch another application. Running multiple applications can slow down the performance of the phone. Close unnecessary application with the Task Manager.

1. Tap  > **Task Manager**.
2. Tap **End** next to an application.
 - Tap **Total X apps End All** to close all applications.

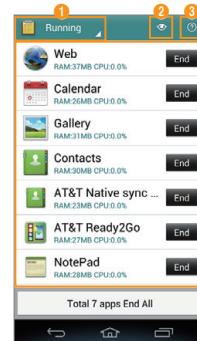


No.	Description
1	Select a category.
2	Select a view type.
3	View the tips.
	List of active applications
4	• Tap an application to view its information or protect it from forced closure.

Using the Applications Menu

Layout of the Menu Screen

You can sort applications by group, alphabetical order, or downloads. Tap  to open the Applications menu.

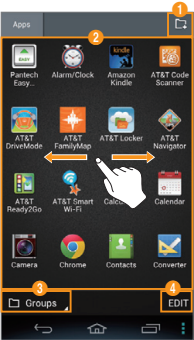

No.	Description
1	Create a new group. Tap an icon to launch the application.
2	- Tap and hold an icon to create a shortcut on the Home screen. - Flick the screen to the left or right to move to the previous or next page.
3	Sort applications. - Tap Groups to arrange icons manually. - Tap Alphabetical to sort icons in alphabetical order (flick upward or downward to search for applications). - Tap Downloads to view downloaded applications.

No.	Description
4	View application information or move, uninstall, or hide applications. - Tap and hold an icon, and then drag it to another location. - Tap an icon to view application information, or uninstall or hide applications.

① **Note** You cannot uninstall pre-installed applications.

Using the Menu Options

Use the menu options to configure the Menu screen.

1. Tap  >  > an option.

Option	Description
Search	Search for an application.
Share	Share applications with people.
Manage groups	Add, move, or delete groups.
View hidden apps	View hidden applications.
Change Icons	Change icon style.
Play Store	Access Play Store.
Tips	View the tips.


① **Note** When you tap  the items available will vary depending on the sorting method (**Groups**, **Alphabetical**, or **Downloads**).

Using Motion Commands

You can use your phone without touching the screen. The phone recognizes motion commands for simple actions, such as calling, messaging, viewing the gallery, and listening to music. This is helpful when you wearing gloves or you must keep your attention on another task.

About Motion Commands

The front camera lens of the phone recognizes three actions: waving, moving your hand to the left or right, and covering the screen. For best results, ensure you direct the motion at the front camera lens and move your hand away from the front camera after completing the motion. This function is deactivated by default. To use this function, you must first activate it.

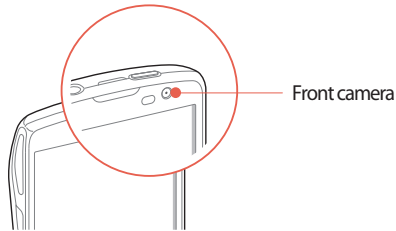

① Note

- Perform the motion about a hand span from the phone.
- Ensure there is sufficient light for the camera to recognize the motion.
- Turn off the motion recognition function when not in use to conserve battery power.

Activating Motion Recognition


1. Drag the area at the top of the screen downward.
2. In **Quick Settings**, tap **Motion Recognition**.

① **Note** You can also activate motion recognition by tapping  > **Settings** > **Motion recognition**.

Receiving a Call


When a call comes in, wave your hand two or more times in front of the front camera. The call will be answered with the speakerphone on, to allow for hands-free communication.

To disable the automatic speakerphone function, tap  > **Settings** > **Motion recognition** > **Speakerphone usage** > **Use speakerphone**.

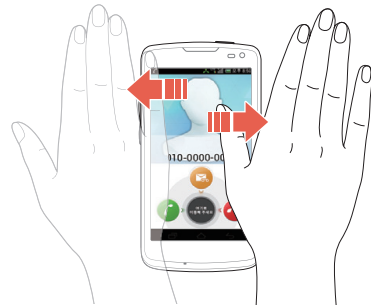

Navigating Files or Messages

While reading messages or browsing music or image files, move your hand across the screen to see the next or previous message or file. Move your hand to from left to right to go to the previous message or file. Move your hand from right to left to go to the next message or file.

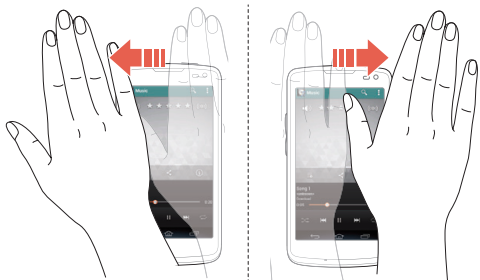


ⓘ **Note** You cannot use the motion recognition function in conversation view.

Playing Slide Shows or Music

In the Gallery, cover the front camera with your hand to begin a slide show.

When using the music player, cover the front camera with your hand to pause or resume a track.

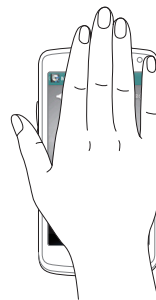


Viewing Speed Dial Numbers


You can view speed dial numbers by tilting or flipping your phone.

① **Note** Before using this function, set speed dial numbers (refer to page 50).

1. Tap **☰** > **Phone** > **☰** > **Dialpad setting**.
2. Scroll to **Motion-Tilt** or **Motion-Flip** and then tap **Save**.
3. Tilt or flip your phone to view speed dial numbers.

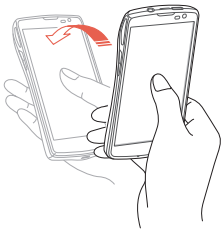

Tilt the phone.

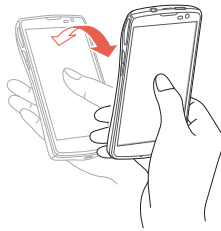


Flip the phone.

Connecting to the Internet

Connecting to a Wi-Fi Network

When you activate Wi-Fi after turning on the phone for the first time or resetting the phone, the Wi-Fi settings screen appears.

1. Drag the area at the top of the screen downward.
2. Tap **Wi-Fi** in **Quick Settings** to turn on Wi-Fi.
 - Tap **Wi-Fi** again to turn off Wi-Fi.
3. Select and tap a network in the Wi-Fi network list.

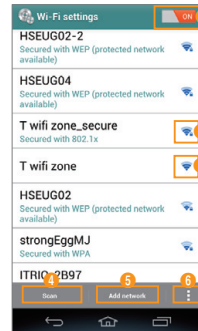

No.	Description
①	Turn Wi-Fi on or off.
②	Secured network
③	Unsecured network
④	Search for available Wi-Fi networks again.

BASIC OPERATIONS

No.	Description
5	Add a Wi-Fi network.
6	Access advanced settings and configure a WPS connection.

① Note

- You can also connect Wi-Fi by tapping  > **Settings** > **Wi-Fi**.
- You must enter a password to connect to a secured Wi-Fi network.

Connecting to a Mobile Network

You will need a data plan to access a mobile network.

1. Drag the area at the top of the screen downward.
2. Tap **Data** in **Quick Settings** to access the mobile network.
 - Tap **Data** again to disconnect from the mobile network.

① **Note** You can also enable data access over mobile networks by tapping  > **Settings** > **More...** > **Mobile networks** > **Data Services**.

Sharing the Internet Connection

The phone can provide other devices with an Internet connection. To view the help, tap  > **Settings** > **More...** > **Tethering & portable hotspot** > **Help**.

Activating USB Tethering

1. Connect the phone to a computer with the data cable.
2. Tap  > **Settings** > **More...** > **Tethering & portable hotspot** > **USB tethering**.
3. Follow the on-screen instructions.

Activating Wi-Fi Tethering

1. Tap  > **Settings** > **More...** > **Tethering & portable hotspot** > **Portable Wi-Fi hotspot**.
2. Read the instructions, and then tap **OK**.
3. Follow the on-screen instructions.
4. Tap **Portable Wi-Fi hotspot settings** and configure the settings.

Activating Bluetooth Tethering

1. Tap  > **Settings** > **More...** > **Tethering & portable hotspot** > **Bluetooth tethering**.
2. Read the instructions, and then tap **OK**.
3. Follow the on-screen instructions.

Setting up a Bluetooth Connection

Bluetooth is a short-range wireless technology that enables wireless connections between electronic devices over a distance of about 10 meters (33 feet).

Turning on Bluetooth

1. Drag the area at the top of the screen downward.
2. Tap **Bluetooth** in **Quick Settings** to turn on Bluetooth.
 - Tap **Bluetooth** again to turn off Bluetooth.

Pairing with Devices

1. Drag the area at the top of the screen downward.
2. Tap **Open** in **Settings Shortcuts** and then tap **Bluetooth Settings**.
 - The phone search for Bluetooth devices.
3. Select and tap a device from the list.
 - Tap  to rename the phone, set a visibility timeout, or view received files.
4. Tap **Pair**.
 - If you are prompted to enter a PIN, follow the instructions on the screen.

① Note

- You can also launch the Bluetooth function by tapping  > **Settings** > **Bluetooth**.
- To unpair a device, tap  next to the paired device, and then tap **Unpair**.
- Some devices may be unpaired as you tap them.
- To use the Bluetooth technology on a computer, the computer must have a built-in Bluetooth capability or you must install an external Bluetooth Dongle. Refer to the computer user manual for more details.

Using Bluetooth

Before Using

- You can send data up to 10 meters (33 feet), but if there are obstacles between the devices, the operating distance may be reduced. Other manufacturers' phones or computers may be incompatible with your phone.
- Using the Bluetooth technology may affect battery life. Turn off Bluetooth when it is not in use to prevent unnecessary battery consumption.
- Bluetooth may interfere with other wireless devices that use the same frequency band.
- Headsets and hands-free devices may not be discoverable when they are connected to and in use with other devices, or when other devices are attempting to pair with them.
- When you make a call, listen to music, or watch TV with a Bluetooth device, the sound quality degrades and the Bluetooth device eventually disconnects as you move farther away from the phone. If you exceed the operating distance, the speakerphone function will activate.
- When you use a Bluetooth headset, sound quality may degrade, due to obstacles or interference. For optimal performance, use a Bluetooth headset within a short distance and remove obstacles from between the devices.
- You may have difficulty hearing some calls in noisy environments or outdoors, due to surrounding noise.

BASIC OPERATIONS

- Some Bluetooth headsets may not be compatible with the phone.
- When you connect the phone to a Bluetooth-enabled car stereo and start the music player on the car stereo, the music application on the phone will launch.

Making a Call

If a Bluetooth headset or hands-free device is paired with the phone, it automatically connects to the phone when you make a call. You can make or answer a call by pressing the call key on the Bluetooth headset or hands-free device.

1. Pair the phone with a Bluetooth headset or a hands-free device (refer to page 43).
2. Start talking.

① Note

- Instructions on using Bluetooth headsets or hands-free devices may vary depending on device type. Refer to the device user manual for more details.
- Some headsets may automatically attempt to reconnect when they are disconnected. The service status of the reconnection may differ from your settings.
- You can switch between a headset and the phone by holding the call key on the Bluetooth headset when the hands-free device is connected. You can also tap **Bluetooth** on the screen during a call. Some Bluetooth headsets do not support the switching function.

Enjoying Multimedia

Listen to music and watch video or TV with a Bluetooth headset or a hands-free device.

1. Pair the phone with a Bluetooth headset or a hands-free device (refer to page 43).
2. Tap .
3. Tap **Music**, **Videos**, or **Live TV**.

① Note

- Instructions on using Bluetooth headsets or hands-free devices may vary depending on device type. Refer to the device user manual for more details.
- If you connect to another headset while a headset is connected in stereo, the second headset can be connected in hands-free mode. Sound quality may degrade when you connect two headsets, due to differences in specifications between them.
- Adjusting the volume on a phone only affects the headset volume. The volume of the phone must be adjusted on the phone.

Transferring Data

Transfer multimedia files, contacts, and more from the phone to other devices.

To Transfer Photos and Videos from Gallery

Pair the phone with other Bluetooth devices (refer to page 43).

1. Tap  > **Gallery** > a photo or video.
2. Tap  > **Bluetooth** > a Bluetooth device.

To Transfer Contacts

Pair the phone with other Bluetooth devices (refer to page 43).

1. Tap  > **Contacts**.
2. Tap and hold a contact.
3. Tap **Share contact** > **Bluetooth** > a Bluetooth device.

① Note

- The transfer procedure and available items may differ depending on content type.
- If a device is disconnected while attempting to connect to the phone, a pop-up window for entering a password will appear when you attempt to pair again. You must enter the correct password to complete the connection.

Installing or Uninstalling Applications

Installing Applications from Play Store

Download useful applications from Play Store and use them for your purposes. You must consent to the Play Store Terms of Service if you are accessing the Play Store for the first time.

1. Tap  > **Play Store**.
2. Search for an application.
3. Select and tap an application.
4. Follow the on-screen instructions to install the application.

① Note

- Settings screens and steps may vary.
- To view installed applications, tap  and move to the last page, or tap the bottom-left corner of the screen to select **Downloads**.
- You can view the installation progress by dragging the area at the top of the screen downward.
- When you access Play Store for the first time, the account registration screen appears. Follow the on-screen instructions to register an account.

Deleting Applications

1. Tap .
2. Tap **EDIT**.
3. Select and tap an application to delete, and then tap **Uninstall** > **OK** > **OK**.

① **Note** You cannot uninstall pre-installed applications.

5

CALLING & MESSAGING

Calling
Managing Contacts
Messaging



PANTECH
P9090



CALLING & MESSAGING

Calling

Making a Call

1. Tap  > **Phone**.
2. Enter a phone number.
3. Tap  at the bottom of the screen.
4. Tap  to end the call.



No.	Description
1	Dialpad
2	Call logs
3	Favorite contacts
4	Delete entry.
5	Save the number to Contacts. Search Contacts. Set a speed dial number. Add a pause or wait symbol. Change the dialpad type. Access the settings.

No.	Description
6	Access the voice mailbox.
7	Launch Contacts.

① Note

- Tap and hold a speed dial number to make a call. If the speed dial number is two digits, tap the first digit, and then tap and hold the second digit.
- You must tap  to end a call. If you are using other functions during a call, drag the area at the top of the screen downward, and then tap .
- Available items that appear when you tap  differ depending on how you dial the number (manually or via speed dial).

Making a Call by Voice

You can make a call or open an application with your voice.

1. Tap  > **Voice Dialer**.
2. Say a command.

Adding a Pause or a Wait to a Phone Number

To Add Pause

1. Tap  > **Phone**.
2. Enter the phone number.
3. Tap  > **Add 3-sec pause**.
4. Enter the additional number.
5. Tap .
 - The additional numbers will be entered automatically after 3 seconds.

To Add Wait

- 1. Tap  > **Phone**.
- 2. Enter the phone number.
- 3. Tap  > **Add wait**.
- 4. Enter the additional numbers.
- 5. Tap .
- 6. Tap **Yes** when the **Send following tones?** message appears on the screen.

Answering a Call

- 1. Drag  into the circle to answer a call.
 - Drag  into the circle to reject a call with a message.
 - Press the Volume key or the LOCK/PWR key to mute the ringtone or stop the vibration.
- 2. Start talking.
- 3. Tap  to end a call.

 Note

- The Caller ID may be displayed differently or may not be displayed depending on the caller's preferences. Contact your service provider for more details.
- You must tap  to end a call. If are using other functions during a call, drag the top of the screen downward, and then tap .

Rejecting a Call

Drag  into the circle to reject a call. You can also send a message after rejecting a call by dragging  into the circle.

To Check Missed Calls

Drag the area at the top of the screen downward when  appears on the notification bar. You can also view missed calls by tapping **Phone** > **Call log**.

To Edit Reject Messages

Tap  > **Settings** > **Call settings** > **Edit reject message**. Create or delete a message that is sent when you reject a call.

Using Functions During a Call

Tap the menu icons that appear on the screen during a call to use the following functions:

Function	Description
Speaker	Talk through the speaker.
Hold	Place a call on hold.
Swap	Switch between two calls.
Mute	Mute the phone.
More	Turn Bluetooth On. Turn Noise Suppression Off.
Dialpad	Switch to the dialpad.
End	End a call.
Add call	Dial a second call.
Merge	Make a conference call.

 **Note** You can adjust the volume by pressing the Volume key.

Tap the Home or Back button to use other menus during a call.



Drag the box to any location.

Managing Call Logs

Tap the menu icons that appear on the screen during a call to use a variety of functions.

1. Tap > **Phone** > **Call log**.
2. Tap a call log to view details.
 - Tap and hold to make a call, send a message, send an email, view a contact, or delete an item from a log.
3. View the log.

Note Up to 500 entries can be displayed in the received or dialed call logs.

Managing Contacts


Synchronizing Contacts

When you access Contacts for the first time, the AT&T Address Book window will appear. To synchronize the contacts with the AT&T Address Book, tap **OK**.

Creating Contacts

Save new contacts to your phone or your Google account. If you have registered more than two Google accounts, you can select an account for saving contacts.

1. Tap > **Contacts**.
2. Tap .
3. Enter related information.
 - Tap > **Join** to choose a contact to merge with the new contact.
4. Tap **Save**.

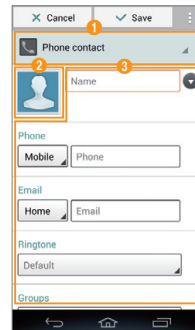


No.	Description
1	Choose a location for saving the contact.
2	Register a photo.
3	Enter a name, phone number, or email address. Set a ringtone. Select a group. Add more information.

Setting a Speed Dial Number

1. Tap **☰** > **Contacts**.
2. Tap **⋮** > **Speed dial setting**.
3. Select and tap a number, and tap **Assign**.
4. Select and tap a contact.

Viewing Saved Contacts

1. Tap **☰** > **Contacts**.
2. Select and tap a contact.
 - Enter a letter of the name to show names that include that letter.
3. View the contact information.

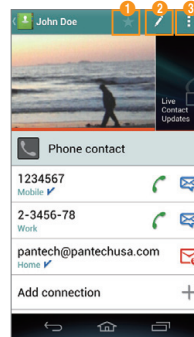

Example: When you save a contact on your phone.

No.	Description
1	Designate the contact as a favorite.
2	Edit the contact.
3	Share or delete a contact, join with another contact, set a ringtone, or forward all calls to voicemail.

To Delete Contacts

Tap and hold a contact to delete, and then tap **Delete contact** > **OK**.

Importing or Exporting Contacts Information

1. Tap  > **Contacts**.
2. Tap  > **Import/Export**.
3. Select and tap an option.

Option	Function
Import from SIM card	Import contacts from the SIM or USIM card.
Export to SIM card (Copy)	Copy contacts from the phone to the SIM or USIM card.
Export to SIM card (Move)	Move contacts from the phone to the SIM or USIM card.
Import from SD card / Internal memory	Import contacts from the SD card to the phone.
Export to SD card / Internal memory	Export contacts from the phone to the SD card.

① **Note** Contact items that can be exported may differ depending on the SIM or USIM manufacturer or service provider.

Synchronizing Contacts with Google Account

1. Tap  > **Contacts**.
2. Tap  > **Accounts**.
3. Select and tap an account.
 - Turn on **Accounts & sync** if it is turned off.
4. Tap the check box next to **Sync Contacts**.

① **Note** You must register a Google account to synchronize contacts with it (refer to page 58).

Setting Contacts Groups

Manage multiple contacts in groups. If you have registered more than two Google accounts, you must select an account for setting groups.

1. Tap  > **Contacts** > **Groups**.
2. Tap .
3. Select a location for saving the group.
4. Enter a group name and add group members.
5. Tap **Save**.

To Add Group Members

Tap and hold a group in the group list, and then tap **Edit group**. Tap **Add group member** and select the names of the members to add.

To Manage Groups

Tap and hold a group in the group list, and then select and tap one of the menu items. You can edit or delete the group, or set a group ringtone. Alternatively, select and tap the group, and then tap . You can send a message to up to 10 group members by tapping **Send**.

Adding to Favorite Contacts

1. Tap  > **Contacts**.
2. Select and tap a contact, and then tap 
 - You can also tap and hold a desired contact, and then tap **Add to Favorites**.

① **Note** You can view your favorite contacts by tapping **Contacts** > **Favorites**.

Finding Local Businesses

1. Tap  > **Contacts** > **Local Search**.
2. Read the License Agreement, and then tap **Accept**.
3. Enter keywords to begin searching or tap one of the business categories.
4. Tap **OK** to allow this function to use your current location.
5. Select and tap a result to view details.
6. Tap  to call the business.

Messaging

Viewing the Conversations List

1. Tap  > **Messages**.
2. View the conversations list.
 - Tap  to delete a conversation, search messages, sort conversations, select a quick text, manage templates, or access the settings.

To Search Messages

In the conversations list, tap  > **Search** and enter a keyword.

To Sort Conversations

In the conversations list, tap  > **Sort by** > an option.

① **Note** Available options differ depending on the stored message.

Viewing a Conversation

View sent and received messages in a conversation and sort conversations by date or contact name.


1. Tap  > **Messages**.
2. Select and tap a conversation.
 - Tap the photo to view contact information.
3. View the messages.
 - Tap and hold a message to view the message detail, lock it or unlock it, edit it, forward it, save the attachment, copy the message as text, delete it, or view message information.
 - Tap  to attach a picture, video, audio, contact, or others.
 - Tap  to reply to the message, insert text, add a slide, add cc or bcc fields, manage templates, save the message as a template, delete the message, or move the message to the SIM or USIM card.

① **Note** You can enlarge or reduce the font size by spreading two fingers apart or pinching them together.

Sending a New Message

Send text (SMS) or multimedia (MMS) messages.

1. Tap  > **Messages**.
2. Tap .
3. Enter the recipient's number or email address.
4. Tap the message input field and enter a message.
5. Tap **Send**.

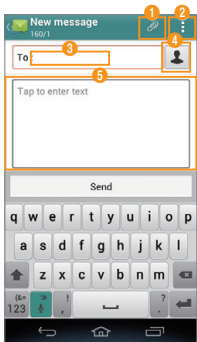

No.	Description
1	Attach a picture, video, audio, contact, or others.
2	Insert text. Add a slide. Add cc or bcc fields. Discard a message. Manage templates. Launch the slide manager. Save the message as a template.
3	Recipient input field
4	Select recipients from contacts, call log, or group.
5	Message input field

- ① **Note** You can add multiple recipients in the recipient input field by adding a comma, space, or semicolon between each recipient's phone number or email address.

Configuring Message Settings

1. Tap  > **Messages**.
2. Tap  > **Settings**.
3. Select and tap an option.

Option	Function
Storage settings	Set the old message auto-deletion limit. Set the text message or multimedia message limit. View used memory.
Signature settings	Edit your signature. Append your signature to outgoing messages automatically.
Text message (SMS) settings	Manage messages stored on your SIM card.
Multimedia message (MMS) settings	Retrieve multimedia messages automatically. Access the extra settings. Set the storage for saving attachments.
Notification settings	Set the message notification to appear. Select a ringtone or vibration for message notifications.

6

COMMUNICATION

Using the Internet

Setting Up Email Accounts

Using Email

Setting Up a Google Account

Using Gmail

Using Google+

Using Social World

Using Social Gallery

Using Facebook

Using Twitter

Using Talk



PANTECH
P9090




COMMUNICATION

Using the Internet

Accessing the Internet

Search for information on the Internet and bookmark your favorite websites.

1. Tap  > **Web**.
2. Tap the address bar, and then enter a URL or keyword.
3. Tap .
 - Tap and hold unlinked text to copy or share it, find it on the page, or search for the text on the web.
 - Drag  upward to open the toolbar.

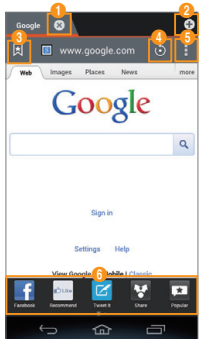

No.	Description
1	Close the tab.
2	Open a new tab.
3	View bookmarks or bookmark the page.
4	Refresh a page.
5	Forward the page. Manage tabs. Open a tab without leaving history. Set the page as a homepage. View bookmarks, browsing history, or saved pages. Share the page. Adjust the brightness. Search for text in the page. Change to desktop view. Save the page for offline viewing. Save or share the page as an image. Access the settings.
6	Access Facebook. Share the webpage. Read articles of a specific topic. • Tap Add More to add more buttons on the toolbar.


- Tap **Add More** to add more buttons on the toolbar.

To Download Files from the Internet

Tap and hold a picture, link, or file, and then tap **Save image** or **Save link**. You can find downloaded files at  > **Downloads**.

Using the Google Search

1. Tap  > **Search**.
2. Enter a keyword in the search box, and then tap .
 - Tap  to access the settings or view the help.
 - Tap  to search by voice.
3. Select a browser.

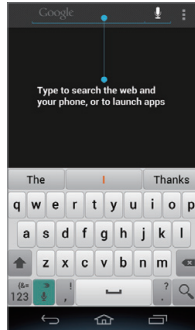

Setting Up Email Accounts

Setting Up Email Accounts Automatically

1. Tap  > **Email**.
2. Select and tap an email service.
3. Enter your email address and password, and then tap **Next**.
4. Configure the settings, and then tap .
5. Enter an account name and your name, and then tap .

Setting Up Email Accounts Manually

1. Tap  > **Email**.
2. Select and tap an email service.
3. Enter your email address and password, and then tap **Manual setup**.
4. Select and tap an account type.
5. Enter the server information, and then tap .
6. Configure the settings, and then tap .
7. Enter an account name and your name, and then tap .

To Add Another Email Account

After setting up the email account, in the mail list screen, tap  > **Accounts** > . You can also tap  > **Settings** > **Accounts & sync** > **Add account** > **Email**.

To Delete an Email Account

1. Tap  > **Email**.
2. Tap  > **Settings**.
3. Select and tap an email account to remove.
4. Tap **Remove account** > **OK**.


Synchronizing Emails

1. Tap  > **Settings** > **Accounts & sync**.
2. Select and tap an email account.
3. Tap the check box next to **Sync Email**.

Using Email


Viewing Email Messages

1. Tap  > **Email**.
 - Tap the check boxes next to emails, and then tap  to move them or mark them as read or unread.
2. Tap a message to view it.

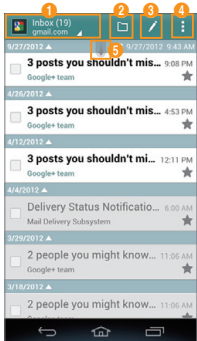

No.	Description
1	Switch to another account.
2	Switch to another mailbox.
3	Create a message.
4	Refresh mail lists. Search an email. Manage accounts. Sort emails. Manage folders. Access the settings.
5	Refresh mail lists.

3. View the message.

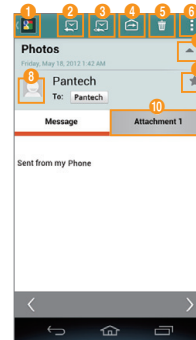

No.	Description
1	Return to the mailbox.
2	Send a reply.
3	Reply to all.
4	Forward the mail.
5	Delete the mail.
6	Move the message to another mailbox. Save an event in the message to the calendar. Mark the message as unread.
7	Show or hide the sent date and time, sender's email address, or star.
8	Add the email address to contacts or view options when the address is already saved.
9	Mark the message as favorite.
10	View or save the attachment.

Creating an Email Message

1. Tap  > **Email**.
2. Tap  to create a new message.
3. Tap the To field and enter the recipient's email address.
4. Tap the Subject field and enter a subject.
5. Tap the text input field and write a message.
 - Tap  to attach a file.
 - Tap  to add cc or bcc fields, save the message to the calendar, or set priority.
6. Tap  to send the message.

Changing Email Settings

1. Tap  > **Email**.
2. Tap  > **Settings**.
3. Select and tap an option.

Option	Settings
General	Set whether or not to show images in messages. Set to request confirmation before deleting messages. Change the view mode. Set to send the message automatically when the phone fails to transmit.
Pre-registered accounts	Configure basic and detailed account settings. Configure notification settings. Remove a registered account.

Setting Up a Google Account

Registering a Google Account

1. Tap  > **Settings** > **Accounts & sync**.
2. Tap **Add account** > **Google**.
3. Tap **New** to create a new account.
 - Tap **Existing** if you have a Google account.
4. Follow the on-screen instructions.

Note

- You must sign in to your Gmail account to use applications that require a Google account.
- You can add other accounts, such as Facebook, Picasa, or Twitter.


Synchronizing Google Accounts

1. Tap  > **Settings** > **Accounts & sync**.
2. Select and tap a Google account.
3. Tap the check box next to **Sync Gmail**.
 - Tap items to synchronize them automatically.

Using Gmail


Viewing Gmail Messages

1. Tap  > Gmail.
2. From the Gmail inbox, tap a message to view it.

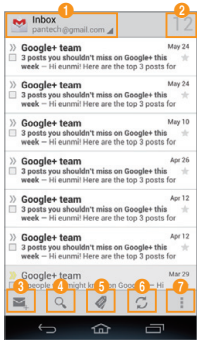

No.	Description
1	Switch to another account or mailbox.
2	Number of unread messages
3	Create a message.
4	Search for a mail.
5	Show all labels.
6	Refresh the mail list.
7	Configure label settings. Access the settings. View the help. Send feedback about Gmail.

3. View the email message.

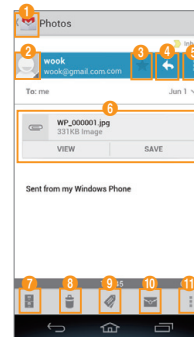

No.	Description
1	Return to the mailbox.
2	Add the email address to contacts or view options when the address is already saved.
3	Designate as a favorite.
4	Send a reply.
5	Reply to all or forward.
6	View or save the attachment.
7	Archive a message.
8	Delete a message.
9	Change labels.
10	Mark the message unread.
11	Mark the message as important or not. Hide the message. Move the message to the Spam mailbox. Access the settings. View the help. Send feedback about Gmail.

Creating a Gmail Message

1. Tap  > **Gmail**.
2. Tap  to create a new message.
3. Tap the To field and enter the recipient's email address.
4. Tap the Subject field and enter a subject.
5. Tap the Compose email field and write a message.
6. Tap  to send the message.
 - Tap  to attach a file, add cc or bcc fields, save as a draft, discard it, access the settings, view the help, or send feedback about Gmail.

Changing Gmail Settings

1. Tap  > **Gmail**.
2. Tap  > **Settings**.
3. Select and tap an option.
 - Tap  to view the help or send feedback.

Option	Settings
General settings	Set to request confirmation before archiving, deleting, or sending messages. Set to reply to all by default. Set a list to show after deletion. Enlarge or reduce the font size. Set to show check boxes next to messages and message actions. Clear search history. Set whether or not to show images in messages.

Option	Settings
Pre-registered accounts	Set the Inbox as the default mail folder. Configure notification settings. Append your signature to outgoing messages automatically. Configure the synchronization settings.
About Gmail	View Gmail version and open source licenses. Send feedback about Gmail. Report a problem about Gmail.

Using Google+

Google+ allows you to share things with people, send messages, and more.

1. Tap  > **Google+**.
2. Follow the on-screen instructions.
3. Tap **All circles** to move to other circles.
4. Select and tap an option.
 - Tap  to refresh the posts.
 - Tap  to search for posts, send feedback about Google+, access the settings, view the help, or sign out of Google+.
 - Tap  to post a new message.
 - Tap  or  to post a new message with a photo or location.
5. Tap  and launch a Google+ menu.


① **Note** Tap  > **Messenger** to start the Messenger function manually.

Using Social World

Social World allows you to use social services, such as Facebook, Twitter, and LinkedIn.

Setting up Social World Accounts


1. Tap  > **Social World**.
2. Tap a Social World service.
3. Enter your username or email address and password.

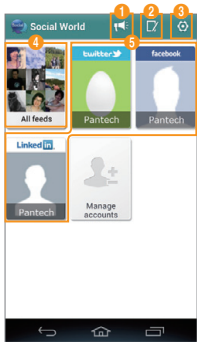

No.	Description
1	View all notifications.
2	Change the order of social services.
3	Access the settings.
4	All feeds
5	Pre-registered accounts

Using Social World Facebook

1. Tap  > **Social World**.
2. Select and tap your Facebook account.
3. Select and tap a tab.

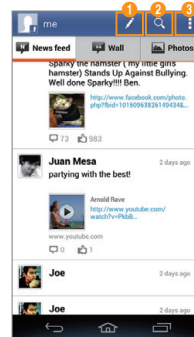


No.	Description
1	Post a new message on Facebook.
2	Search friends. Manage the friends list, groups, and your profile.
3	Refresh feeds. Move to Social World. Access the settings.

① **Note** Tap and hold a message to view the available options.

Using Social World Twitter

1. Tap  > **Social World**.
2. Select and tap your Twitter account.
3. Select and tap a tab.

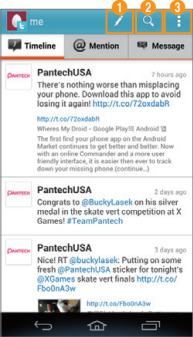


No.	Description
1	Post a new message on Twitter.
2	Search friends.
3	Manage the friends list, favorites, and your profile.
3	Refresh feeds. Move to Social World. Access the settings.

① **Note** Tap and hold a message to view the available options.

Using Social World LinkedIn

1. Tap  > **Social World**.
2. Select and tap your LinkedIn account.
3. Select and tap a tab.

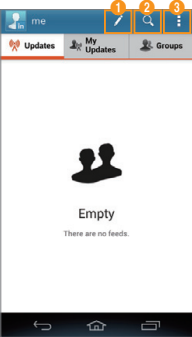

No.	Description
1	Post a new message on LinkedIn.
2	Search friends.
3	Manage the friends list and your profile. Refresh feeds. Move to Social World. Access the settings.

① **Note** Tap and hold a message to view the available options.

Using Social Gallery


Social Gallery allows you to view photos and videos on your social service accounts or your phone.

Setting Up Accounts

1. Tap  > **Social Gallery**.
2. Select and tap a service to add your social network service (SNS) account.
3. Enter your username or email address and password.

Using Social Gallery

1. Tap  > **Social Gallery**.
2. Select and tap a tab.

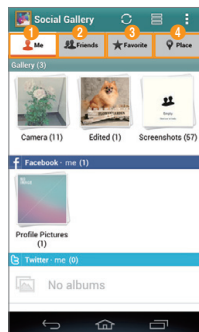


No.	Description
1	Pictures from My gallery
2	Pictures from Friends' social network service (SNS) account

No. Description

- 3 Items selected as favorites
- 4 Pictures by location

3. Select and tap a folder from the list.
4. Select and tap a photo or video.

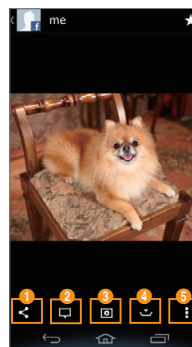

Example: When you select a picture of your Facebook friends.

No. Description

- 1 Share the picture via Bluetooth, Facebook, Gmail, or other method.
- 2 Write a comment or delete the file.
- 3 Play a slide show.
- 4 Download the picture on the phone.
- 5 View the photo information. Print the picture. Set as a contact photo or wallpaper.

① **Note** Available options differ depending on the account type.

Using Facebook

1. Tap  > **Facebook**.
2. Enter your email address and password, and then tap **Log In**.
 - Tap **Sign Up for Facebook** if you do not have a Facebook account.
3. Select and tap a contacts synchronizing option, and then tap **Sync** or **Done**.
4. Tap  to select and tap a tab.

Using Twitter


1. Tap  > **Twitter**.
2. Tap **Sign In**, and then enter your username or email address and password.
 - Tap **Sign Up** if you do not have a Twitter account.
3. Select and tap a tab.

Using Talk

Talk is an instant messenger offered by Google that allows you to chat with your friends.

1. Tap  > **Talk**.
2. Tap your Google account.
 - Tap **ADD ACCOUNT** to log in with another Google account.
3. Select and tap a friend.

4. Chat with your friends.

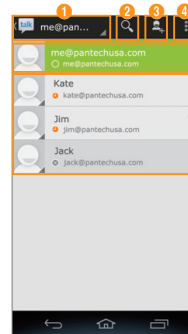

No.	Description
1	Current account • Tap to select another account.
2	Search for friends or chat history.
3	Send a chat invitation.
4	Sort friends by options. End all chats. Sign out.
5	Access the settings. View the help. Send feedback about Talk.
6	Your account • Tap to change your status or message.
	Friends list •  : Online •  : Away •  : Busy •  : Offline

7

MEDIA CENTER

Using the Camera

Capturing the Screen

Using the Gallery

Downloading Music or Video Files from a computer

Using the Music Player

Using Play Music

Using MOG Music

Using the Video Player

Using Play Movies & TV

Enjoying YouTube



PANTECH
P9090



MEDIA CENTER

Using the Camera


Before Using

- It is recommended that you take pictures in bright areas. Avoid direct fluorescent or harsh lighting.
- To achieve good pictures, hold the phone firmly and ensure that the subject is steady.
- The camera sensor needs some time to automatically adjust the exposure. Wait until the camera achieves the correct exposure.
- The built-in camera is vulnerable to impacts. Be careful not to drop the phone. Wipe the camera lens regularly with a soft, clean cloth.
- The phone consumes more battery power when you use the camera. It is recommended that you use the camera only when needed to save battery power.
- Location information may be saved to pictures, depending on the GPS settings.
- Use the camera responsibly and adhere to all laws and regulations concerning its use.

Taking Pictures

The camera automatically detects a scene and adjusts the focus. You can tap the screen to focus on a desired area. Captured pictures are saved in the **Camera** folder under the Gallery application.

1. Tap  > **Camera**.
2. Rotate the phone horizontally.
3. Tap the screen to focus.
4. Tap .

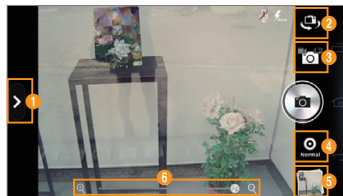

No.	Description
1	Open menus and options.
2	Switch to the front camera.
3	Switch to video or panorama mode.
4	Set the HDR function.
5	View captured pictures.
6	Zoom in or out.

① **Note**

- You can also zoom in or out by pressing the Volume key or spreading your fingers apart or pinching them together.
- You can take pictures faster at 8M resolution than in the highest resolution.
- Available picture resolutions differ when you use the front camera. Tap > **Options** > **Resolution** to view available resolutions.
- The High Dynamic Range (HDR) function automatically adjusts the bright and the dark areas of a photo. It allows a greater dynamic range between the brightest and darkest areas of a photo.

Using Options for Taking Pictures

Configure the camera settings to match shooting conditions.

1. Tap **Camera**.
2. Rotate the phone horizontally.
3. Tap the screen to focus.
4. Tap **Options**.
5. Tap a menu > an item.
 - Tap and hold an item, and then drag it into an orange box to add a shortcut.
 - Tap and hold a shortcut, and then drag it off of the menu bar to delete it.

Menu	Setting (when you use the rear camera)
Options	Configure exposure, timer, flash, focus mode, resolution, and white balance settings.
Mode	Change the shooting mode.
Effects	Select a color effect.
Settings	Show the review screen after taking pictures. Select a metering type. Use voice recognition, GPS, shutter sounds, and grid lines. Select a location for storage pictures.


① **Note**

- Instant Film mode allows you to apply the instant camera effect and edit pictures.
- If you set the **Review Screen** function, you can use the album, edit, share, and delete menus after taking pictures.
- If you tap > in vertical mode, you can drag the screen upward or downward to view items.

Recording Videos

Record videos with the built-in camera. You can also capture an image during playback. Captured videos and photos are saved in the **Camera** folder under the Gallery application.

1. Tap **Camera**.
2. Rotate the phone horizontally.
3. Tap **Video** to switch to the video mode.
4. Tap the screen to focus.
5. Tap **Record**.

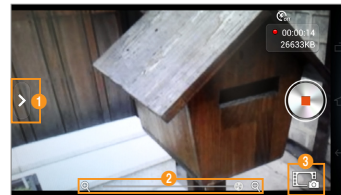

No.	Description
1	Open menus and options.
2	Zoom in or out.
3	Capture an image during recording.

6. Tap  to stop recording.

① **Note** You can also zoom in or out by pressing the Volume key or spreading your fingers apart or pinching them together.

Using Options for Recording Videos

Configure the camera settings to match shooting conditions.

1. Tap  > **Camera**.
2. Rotate the phone horizontally.
3. Tap  >  to switch to the video mode.
4. Tap .
5. Tap a menu > an item.
 - Tap and hold an item, and then drag it into an orange box to add a shortcut.
 - Tap and hold a shortcut, and then drag it off of the menu bar to delete it.

Menu	Setting (when you use the rear camera)
Options	Configure exposure, timer, flash, resolution, and white balance settings.
Effects	Select a color, time lapse, face, or background effect.
Settings	Show the review screen after recording videos. Record audio along with video. Record video with limits for MMS attachment. Use GPS, shutter sounds, and grid lines. Select a location for storage videos.

Taking Panoramic Pictures

Take a wide panoramic scene in a single picture. Captured pictures are saved in the **Camera** folder under the Gallery application.

1. Tap  > **Camera**.
2. Rotate the phone horizontally.
3. Tap  >  to switch to panorama mode.
4. Tap .



No.	Description
1	Switch to picture or video mode.
2	View captured pictures.


5. Move the phone continuously in one direction until the panorama is complete.
6. Tap .

Viewing Captured Picture or Videos

1. Tap  > **Camera**.
 2. After finishing capturing, tap the image viewer at the bottom right of the screen.
- ① **Note** The Gallery application starts when you tap the image viewer (refer to page 70).

Capturing the Screen

Press the Volume Down key and the Lock/PWR key together to capture an image of the screen. You can edit and share the captured image, and also set it as a wallpaper or contact photo.

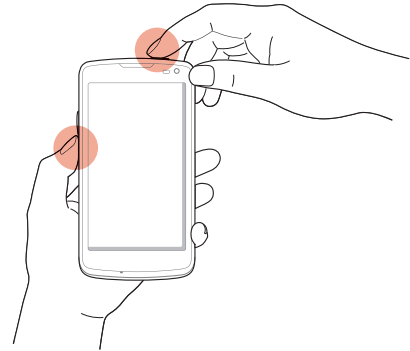


Viewing Captured Images

Drag the area at the top of the screen downward, and then tap **Screenshot captured**. You can also view captured images by tapping  > **Gallery** > **Screenshots**.


Using the Gallery

Viewing Pictures

1. Tap  > **Gallery**.
2. Select and tap a folder.
 - Tap  to play a slide show.
 - Tap  to select items or view pictures in groups.
 - Tap and hold a picture to share or delete the picture, or view menu items.
3. Select and tap a picture.

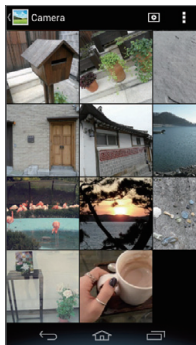

4. View the picture.

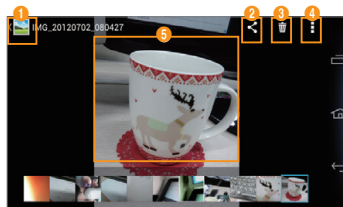


Example: When you select a picture in the **Camera** folder.

No.	Description
1	Return to the folder.
2	Share the picture via Social World, Bluetooth, or other method.
3	Delete the picture.
4	Play a slide show. Edit the picture. Rotate the picture. Crop the picture. Set as a contact photo or wallpaper. View the file information.
5	The selected picture • Tap to view or hide the option menus.

Viewing Videos

1. Tap  > **Gallery**.
2. Select and tap a folder.
 - Tap  to play a slide show.
 - Tap  to select items or view videos in groups.
 - Tap and hold a video to share or delete the video, or view menu items.

3. Tap  to play the video.
 - Tap  to share the video.
 - Tap  to delete the video.
 - Tap  to view the file information.
4. View the video.

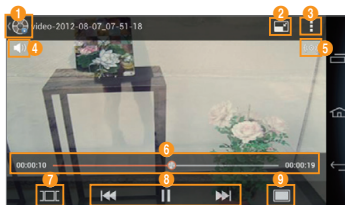

No.	Description
1	Return to the playlist.
2	Switch to compact mode.
3	Share the video. View the file information. Access the settings. If the video has a caption, you can configure the caption settings.
4	Adjust the volume.
5	Set the sound effects.
6	Playback progress bar
7	View the thumbnails of a video. • Tap a thumbnail to move to that scene.
8	Control the playing.
9	Adjust the screen size.

Downloading Music or Video Files from a computer

Share music or video files with a computer via the data cable. You must first install Windows Media Player 10 or higher.

1. Tap  > **Settings** > **USB connection settings** > **Media device (MTP)**.
 - Tap **Tips** to view tips about connection modes.
2. Connect the phone to a computer with the data cable.
3. Open the MTP device on the computer, and then transfer files from the computer to your phone.
4. Disconnect the data cable when the transfer completes.

① Note


- To connect the phone to a computer in MTP mode, the computer and Windows Media Player must meet the requirements under the following path. Tap  > **Settings** > **USB connection settings** > **Tips**, and then tap the **Media device (MTP)** tab.
- If you do not tap the check box next to **Show settings when USB connected**, in the **USB connection settings** screen, the screen will not appear next time you connect your phone to a computer. In that case, drag the area at the top of the screen downward, and then tap **Touch for other USB options** to open the **USB connection settings** screen.
- The USB connection may fail depending on your computer's operating system. Tap **Tips** in the **USB connection settings** screen for details.

Using the Music Player

Listening to Music

Enjoy music on the phone.

1. Tap **Music**.
2. Select and tap a tab.
 - Tap **Music** to delete files or access the settings.
 - Tap and hold a file to set it as a ringtone, add it to a playlist, delete it, send it, or view file information.
3. Select and tap a file to play.

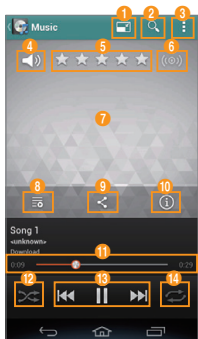

No.	Description
1	Switch to compact mode.
2	Search for the file in an application.
3	Add the song to a playlist. Set the song as ringtone. Set the sleep mode. Access the settings.
4	Adjust the volume.
5	Rate the file.
6	Set the sound effects.
7	Album cover • Drag to the left or right to skip to the previous or next track.
8	Switch to the playlist.
9	View similar songs on YouTube and share the information via social network service (SNS).
10	View the song information.
11	Progress bar
12	Set random play.
13	Control the playing.
14	Set repeat play.

To Control Music on the Locked Screen

If the screen is locked when you play music, drag the CD image at the upper-right of the screen to the left. You can use the playback bar to pause, playback, or skip to the previous or next track.



Example: When you use Modern lock.

① Note

- The playback screen differs when you rotate the phone horizontally.
- The instructions in this manual are based on the default playback screen. Available items may differ depending on the options you select.

Creating a Playlist

1. Tap > **Music**.
2. Drag the tab to the left and tap **Playlists**.
3. Tap > **New playlist**.
4. Enter a name for the playlist, and then tap **OK**.
5. Select and tap the tracks that you want to add to the playlist.
6. Tap .

To Add Songs to a Playlist

Tap and hold a track, and then tap **Add to playlist** > a playlist.

To Edit Playlists

Drag the tab to the left, tap **Playlists**, and then tap and hold a playlist. Select and tap an option to edit the playlist.

Using Play Music

Play Music allows you to play music stored on your Google Play music library or on your phone.

1. Tap > **Play Music**.
2. Select and tap a track.
3. Follow the on-screen instructions.

Using MOG Music

With MOG Music, you can enjoy unlimited music on demand.

1. Tap  > **MOG Music**.
2. Tap the appropriate option.
3. Follow the on-screen instructions.

Note

- The first time you open this application, you must download the updated application from the Play Store.
- The MOG service requires a subscription. A free trial period is provided for new users. Once the trial period expires, you must subscribe to continue using the service.

Using the Video Player

Before Using

- Supported video formats and codecs are H.263, H.264 AVC, MPEG-4, VC-1(WMV), DivX/XviD, VP8.
- Supported files types and container formats are .3gp, .3g2, .mp4, .mkv, .avi, .wmv, .asf, .divx.
- Some videos may not appear as thumbnails in Gallery or other applications due to performance limitations.
- Damaged or incompatible files may not play or may play abnormally.
- The maximum resolution is 1920 X 1080. Some files in certain formats or codecs may not play or may play abnormally according to encoding options such as profile or level, frames per second, or bit rate.
- Some files may not play or may play abnormally due to performance or memory limitations.

- Large video files may take longer to start playing or to search.
- If you play video files with a Bluetooth headset connected, playback may differ depending on file formats or codecs.
- Subtitles (.smi or .srt) are supported with video files.

Viewing Videos

1. Tap  > **Videos**.
2. Select and tap a video.
 - Tap  to play, delete, share, or sort files, go to DivX registration, or access the settings.
 - Tap and hold a video file to delete, share, search for, or view the file information.
3. View the video.



No.	Description
1	Return to the playlist.
2	Switch to compact mode.
3	Share the video. View the file information. Access the settings. If the video has a caption, you can configure the caption settings.

No.	Description
4	Adjust the volume.
5	Set the sound effects.
6	Playback progress bar
7	View thumbnails of the video. Tap a thumbnail to move to that scene.
8	Control the playing.
9	Adjust the screen size.

Using Play Movies & TV


Play Movies & TV allows you to play videos stored in Google Play or on your phone.

1. Tap  > **Play Movies & TV**.
 - Tap  to launch Play Store.
 - Tap  to select an account, access the settings, view the help, report a problem, or send feedback about the service.
2. Tap a tab and select a video.

Enjoying YouTube

Watching Videos

1. Tap  > **YouTube**.
2. Select and tap a video.
3. View the video.

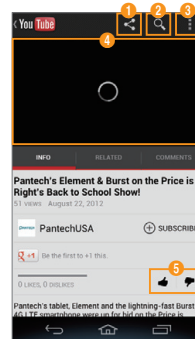

No.	Description
1	Share via Gmail, Messages, Bluetooth, or other method.
2	Search for videos. Add accounts. If you log in, you can add the video to a playlist or share it. Rate the video. Share the video with a TV. Copy URL. Report an inappropriate video.
3	Access the settings. Send feedback about YouTube. View the help.

No.	Description
	Playback screen
4	• Tap  to pause the video. • Tap  to resume the video.
5	Rate the video.

① **Note** Rotate the phone horizontally to switch to full screen view.

Uploading Videos

1. Tap  > **YouTube**.
2. Tap **Sign in**.
 - If you have logged in, tap your account.
3. Select and tap an account.
 - Tap **New** to create an account.
4. Tap the account > .
5. Select and tap a folder > a video.
6. Select and tap an upload option.
7. Enter the title, description, and tags for the video, and then configure the privacy settings.
8. Tap **Upload**.

8

MENU FUNCTIONS

Alarm/Clock
Calculator
Calendar
Chrome
Converter
Downloads
File Manager
Latitude
Local
Maps
Navigation
Net Media

Notepad
Pill Reminder
Play Books
Play Magazines
Smart beam
Smart Voice
Tip Calculator
ThinkFree Office
Voice Recorder
Weather

PANTECH
P9090

MENU FUNCTIONS

Alarm/Clock

Set alarms, view the world time, use a timer, or set a stopwatch.

Adding a New Alarm

1. Tap  > **Alarm/Clock**.
 - Tap  to use your phone as a desk clock.
 - Tap  to delete alarms.
 - Tap  to access alarm settings.
2. Tap **Alarm** > **Add alarm**.
3. Select an alarm time from the numbers displayed, and then tap **Set**.
4. Configure the settings for the alarm, and then tap **Save**.
 - A red bar appears under the alarm.
 - Tap  to turn on or off an alarm.

① **Note** To change the alarm setting, tap the alarm time.

Viewing the World Time

1. Tap  > **Alarm/Clock**.
2. Tap **World Time** > **Add new city**.
3. Enter the first letter of a city.
4. Select and tap the name of the city.

① **Note** To delete cities, tap  select and tap the cities, and then tap  again.

Using the Timer

1. Tap  > **Alarm/Clock**.
2. Tap **Timer**.
3. Set the timer by tapping the middle of the screen, and then tap **Set**.
4. Tap **Start**.

① **Note** You can reset the timer by tapping **Reset** while the timer is running.

Using the Stopwatch

1. Tap  > **Alarm/Clock**.
2. Tap **Stopwatch**.
3. Tap **Start** to start the stopwatch and tap **Record** to measure lap/split times.

Calculator

Perform basic mathematical calculations.

1. Tap  > **Calculator**.
2. Enter numbers and tap the appropriate mathematical operators.
3. Tap  to view the result.
 - Tap  to delete a number.
 - Tap and hold  to delete all numbers.

① **Note** Rotate your phone horizontally to use the scientific calculator function.

Calendar

Manage your schedules and events.

1. Tap  > **Calendar**.
2. Select and tap a date.



No.	Description
1	View the calendar by day, week, month, or agenda.
2	Add an event.
3	Move to today.
4	Refresh or search events. Select calendars to display.
5	Access the settings.
5	Events for the selected day.

3. Tap .
4. Enter information, and then tap **Save**.

Chrome

Search for information on the Internet with the Google Chrome browser. You can synchronize the browser with your desktop and your phone to share your search history and bookmarks.

1. Tap  > **Chrome**.
2. Read the Terms and Conditions carefully, and then tap **Accept and Continue**.
3. To connect to your Google account, tap **Sign in**. Otherwise, tap **No thanks**.
4. Tap  > **Other devices**.
 - To view the tutorial, tap **Take a tour**.
5. Tap the address bar, and then enter a URL or keyword.
6. Browse the Internet.
 - Tap  to return to the webpage.
 - Tap  to view your bookmarks.
 - Tap  to view your search history.

Converter

Convert values for length, volume, weight, temperature, area, and speed.

1. Tap  > **Converter**.
2. Select a unit type.
3. Enter a value.
4. Select the original unit.
5. Select a target unit.
 - The converted value is shown.

MENU FUNCTIONS

Downloads

Downloads allows you to view and manages the files you download from the Internet.

1. Tap  > **Downloads**.
2. Select and tap a file.

① **Note** Tap the check box next to a file, if you want to share or delete the file.

File Manager

Manage files that are stored in the phone or on a memory card.

1. Tap  > **File Manager**.
2. Select and tap a folder > a file.
 - Tap and hold a folder or file to set it as a favorite, cut, copy, delete, rename, or zip it, or view its information.



No.	Description
①	Switch between internal memory and a memory card.
②	Search for files and folders.
③	View favorites. Create a new folder. Change the view type. Sort files and folders. View the storage capacity. Refresh lists. Access the settings.
④	Move up one level in the file directory.
⑤	Current location
⑥	Folders and files

Latitude

Share your location with your friends or view your friends' locations. You must have a Google account to use Latitude.

Sharing Location with Your Friends

1. Tap  > **Latitude**.
2. From the FRIENDS LIST screen, tap  > **Select from Contacts** or **Add via email address**.
3. Select and tap a contact or enter an email address.
4. Tap **Yes** to send sharing requests.

Accepting Invitation from Friends

1. Tap  > **Latitude**.
2. Tap **new sharing request** on the top of the screen.
3. Select and tap an option to share your location.
 - Tap **Accept and share back** to add the person to your friends list and share your location as well.
 - Tap **Accept, but hide my location** to add the person to your friends list and keep your location hidden.
 - Tap **Don't accept** if you do not want to add the person to your friends list.
 - Tap **Block** to block all future requests from the person. This option is available only after you turn down the person's request.

Managing Friends

1. Tap  > **Latitude**.
2. Select and tap a friend from the FRIENDS LIST screen.
 - Tap **Ping for check in**, and then select the time interval for refreshing locations.
 - Tap **Manage sharing** and select an option.
 - Tap **Remove this friend** and tap **OK**.

Viewing Your Location History

1. Tap  > **Latitude**.
2. Tap your name from the FRIENDS LIST screen.
3. Tap **Location history**.
4. View your location history.
 - Tap **Location settings** > **Enable location history**, and then follow the on-screen instructions if you have not turned on the location history function.

Managing Location Settings

1. Tap  > **Latitude**.
2. Tap  > **Location settings**.
3. Configure the settings.

Option	Description
Location reporting	Set how to report your location.
Report from this device	Send your location history automatically.
Enable location sharing	Allow sharing of your location with your friends.
Manage your friends	Add or remove friends who can see your location.
Enable location history	Set to record your location history.

MENU FUNCTIONS

Local

Find restaurants, cafes, bars, attractions, and other businesses.

1. Tap  > **Local**.
2. Select and tap one of the business categories.
3. Select and tap a business.

Maps

Find a location and a route to your destination. You can also get traffic, satellite, and altitude information, as well as geographic information from Wikipedia.

1. Tap  > **Maps**.
2. Select and tap an option.



No.	Description
1	Launch Local, Navigation, or Latitude. View location history or favorite places.
2	Find my location. Change the view mode.
3	Search.
4	Find a route.
5	Launch Local.
6	Add a layer of additional information.
7	Clear the map. Make the map available offline. Access the settings. View the help.

Navigation

Find a route to your destination with the navigation function.

Searching for a Destination

1. Tap  > **Navigation**.
2. Select and tap an option.

Option	Description
STARRED	Select the destination from starred places.
SHORTCUTS	• Speak destination: Search for the destination by voice. • Type destination: Search for the destination by entering. • Go home: Find a way back home. • Map: View traffic condition on the map.

Option	Description
RECENT DESTINATIONS	View the addresses of recent destinations.
CONTACTS	Select the destination from your contacts.

3. Select and tap a destination.

① **Note** You can also search for a destination by entering it or selecting it in the contacts.

Checking Traffic Conditions

Flick the screen along the suggested route to the destination.

- Depending on the traffic conditions, the road will be highlighted in green (good), yellow (slow), or red (heavily congested).

Net Media

Play or share media files between DLNA-supported devices.


① **Note** The DLNA-supported devices must be connected to the same Wi-Fi network.

About Digital Living Network Alliance (DLNA)

The Digital Living Network Alliance (DLNA) is a collaborative organization that leads commercialization of global home network services. Its goal is to build compatible platforms by using standards- based technology to make it easier for DLNA-certified device users to share media contents over a home network.

Playing Media Files

- Tap  > **Net Media**.
- Select and tap a device to import contents from.
 - Tap your phone to upload files from your phone to another device.
 - Tap  to search device.
 - Tap  to access the settings (refer to page 85).
- Select and tap a device to play contents with.
- Tap **Next**.
- Select and tap a folder.
 - Tap and hold a file and tap **Download** to download the file to your phone.
 - Tap and hold a file and tap **Properties** to view the file information.
- Select and tap a file to view.

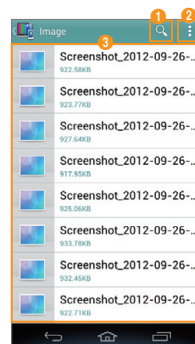

MENU FUNCTIONS


No.	Description
1	Search for a file.
2	Move to main. Select a playlist. Select files to download or upload. View files by content type or folder type. Change the sorting order.
3	File list

7. View the file.




Example: When you view a photo.

No.	Description
1	Play a slide show.
2	Select a device to play the file with.
3	View the file information.
4	Zoom in or out.

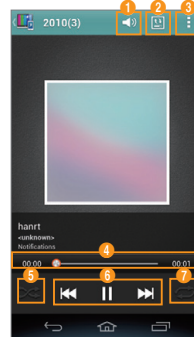

Example: When you play music.

No.	Description
1	Adjust the volume.
2	Select a device to play the file with.
3	Create a playlist. View the file information.
4	Playback progress bar
5	Set random play.
6	Control the playing.
7	Set repeat play.

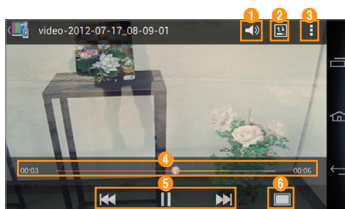

Example: When you play a video.

No.	Description
1	Adjust the volume.
2	Select a device to play the file with.
3	View a playlist. View the file information.
4	Playback progress bar
5	Control the playing.
6	Adjust the screen size.

Sharing or Uploading Media Files with Other Devices

To Share or Upload Photo or Video

1. Tap > **Gallery**.
2. Select and tap a folder > a photo or video.
3. Tap > **Net Media**.
4. Tap **Select device to play** or **Upload**.

To Share or Upload Music

1. Tap > **Music**.
2. Select and tap a tab.
3. Tap and hold a music file to share or upload.
4. Tap **Send** > **Net Media**.
5. Tap **Select device to play** or **Upload**.

Permitting Other Devices to Search Your Device

1. Tap > **Net Media**.
2. Tap **Yes** in the question that pops up when another device tries to access your contents through Net Media.

① **Note** To view devices that can access your contents, tap > **Contents share device**.

Customizing Settings

1. Tap > **Net Media**.
2. Tap .

Option	Description
Device Name	Change the phone name. You can add up to 32 characters for the name.
Network Info	Connected Wi-Fi network
Net Media Server On	Set to use the phone as DLNA server.
Contents Share	Permit other devices to search the phone.

MENU FUNCTIONS

Option	Description
Contents share device	View devices that can access your contents.
Contents Position	Change the place where contents to share are saved. Tap Internal Memory or SD Card if the microSD™ card is inserted.
Contents Share Folder	Change the folder where shared contents will be saved.
Download directory	Select the directory to download files.
Upload directory	Select the directory to upload files.


Notepad

Create and share memos.

Creating a New Memo

1. Tap  > **Notepad**.
2. Tap  to add a new memo.
3. Enter the text using the on-screen keypad.
4. Tap **Done** to save the memo.

Layout of the Memo List Screen

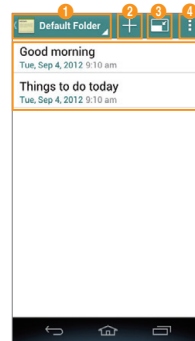

No.	Description
1	Select a folder.
2	Create a memo.
3	Switch to compact mode.
4	Delete, sort, move, or search memos.
5	Memo list

① **Note** Tap and hold a memo to edit, share, move, or delete it.

Creating a Folder

You can create a folder or change the name of an existing folder. When you first start NotePad, only the Default Folder exists.

1. Tap  > **Notepad**.
2. Tap  > **Folder Setting**.
3. Tap  to add a folder or tap an existing folder.
4. Enter the name of the folder and select a color of the folder.
5. Tap **Done**.

Locking or Synchronizing Memos

You can lock your memos or synchronize them with your Google account.

1. Tap  > **Notepad**.
2. Tap  > **Lock & sync**.
3. To lock memos, tap **Set password**, and then configure the settings.
 - To synchronize memos, tap **Add account**, and then configure account settings.
4. Tap **Done**.

Pill Reminder

Pill Reminder reminds you to take your medications regularly.

1. Tap  > **Pill Reminder**.
2. Tap .
3. Set options.
4. Tap **Done**.

Play Books

Play Books allows you to read books stored in Google Play.

1. Tap  > **Play Books**.
 - Tap  to launch Play Store.
 - Tap  to search for a book.
 - Tap  to save a book for offline viewing, change the view mode, refresh the book list, select an account, access the settings, or view the help.
2. Select and tap a book.
 - To move to another page, flip the page as you would with a real book.

Play Magazines

Play Magazines allows you to read magazines stored in Google Play.

1. Tap  > **Play Magazines**.
 - Tap  to launch Play Store.
 - Tap  to subscribe to a magazine, refresh the magazine list, access the settings, or view the help.
2. Select and tap a magazine.

Smart beam

Smart beam allows you to transfer files easily by placing two phone back-to-back. You can transfer files, contacts, schedules, and more.

① Note

- You cannot share Digital Rights Management (DRM)-protected files, files on the Internet, or files that must be streamed.
- Pantech is not responsible for illegal sharing of data.
- When you are using Smart beam, the Bluetooth and Wi-Fi direct functions are activated automatically. After the files have been shared, turn off these functions to conserve battery power.

Activating the Smart beam

1. Tap  > **Settings** > **More...**
2. Tap the check box next to **NFC**.
 - The Android beam function is activated along with the NFC function automatically.

Transferring files

1. Select and open a file you want to transfer.
2. Place the back of your phone against the back of another phone that supports the Smart beam functions.
3. When the message appears, tap the screen.
 - When the transfer is complete, the transferred file will open automatically.
4. Tap **Confirm**.

Smart Voice

Smart voice allows you to send a message, make a call, or search for and play music by voice. Tap  to learn how to use Smart Voice.

1. Tap  > **Smart Voice**.
2. Read the License Agreement, and then tap **Agree**.
3. Read the instructions, and then tap **Okay**.
4. Tap  and say a command.

Tip Calculator

Calculate tips and split bills.

1. Tap  > **Tip Calculator**.
2. Enter the total amount of the bill, the tip percentage, and the number of people that are splitting the bill.
3. Tap **Done**.


ThinkFree Office

ThinkFree Office allows you to edit Office documents on your phone.

Create a document

1. Tap  > **ThinkFree Office**.
2. Read the License Agreement, and then tap **Accept**.
3. Tap **Activate now** to complete registration. Tap **Later** if you want to register later.

4. Tap .
 - If you want to use a template to create a document, tap **Template**.
5. Select a document type.
6. To create the document, you can perform the following functions:

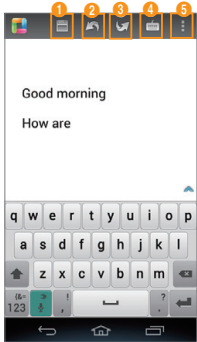

Example: When you select **Word**.

No.	Description
1	Save the document.
2	Cancel the last action.
3	Redo the last action.
4	Show or hide the keyboard.
5	Access the settings.

View a document

1. Tap  > **ThinkFree Office**.
2. Select and tap a folder.
3. Tap another option for viewing files, if you want:
 - Tap **My Docs** to view the files saved on your phone.
 - Tap **Recent Docs** to view the files you recently opened.
 - Tap **Online** to view the files saved your cloud service.
4. Select and tap a file.

Voice Recorder

Record an audio file.

1. Tap  > **Voice Recorder**.
2. Tap  to start recording.
 - Tap  to view the file list.
 - Tap  to set the location for saving files.
3. Tap  to stop recording.
 - The audio file is saved automatically.

Weather

View weather information for certain cities.

Adding a New City

1. Tap  > **Weather**.
2. Enter the name of the city you want to add, and then tap 
 - Tap  if you already added a city.
3. Select and tap the city.
 - Current weather information for the city appears on the list.
4. Tap the city on the top to view other city's weather forecast.

Viewing Weather Information

1. Tap  > **Weather**.
2. Select and tap a city in the list.
3. Tap  to view updated information.

Changing the Weather Settings

1. Tap  > **Weather**.
2. Tap  > **Settings**.

3. Configure the settings.

Option	Description
Temperature scale	Choose a temperature unit.
Auto update	Choose a time period for auto updating weather information.
Current location	View weather for your current location automatically in the city list.

9

AT&T SERVICES

Amazon Kindle
AT&T Code Scanner
AT&T DriveMode
AT&T FamilyMap
AT&T Locker
AT&T Navigator
AT&T Ready2Go
AT&T Smart Wi-Fi
Live TV
Device Help
YPmobile
myAT&T
Messages



PANTECH
P9090



AT&T SERVICES

Make your phone do more for you with useful applications from AT&T.

Amazon Kindle

Read books on your phone.

1. Tap  > **Amazon Kindle**.

① **Note** The first time you open this application, you need to download the updated application from the Play Store.

2. Tap **Get Kindle for Android**.
3. Log in with your Amazon account.

AT&T Code Scanner

Read UPC, QR, and Data Matrix barcodes found on products, magazines, and the Internet.

1. Tap  > **AT&T Code Scanner**.

① **Note** The first time you open this application, you need to download the updated application from the Play Store.

2. Read the Terms and Conditions carefully, and then tap **Accept**.
3. When the pop-up window appears, tap **OK**.
4. Enter your personal information, and then tap **Done**.
5. View the tutorial.
6. Place your phone 2 to 5 inches away from a barcode.
 - The scanner will automatically scan the barcode.
 - Ensure that the barcode is completely within the frame.
7. Tap **Yes** to see the information provided by the barcode.

AT&T DriveMode

Turn Drive mode on or off. In Drive mode, you cannot receive some incoming calls or notifications and some applications are restricted. Drive mode turns on automatically when you travel faster than 25 mph (40 kmh).

1. Tap  > **AT&T DriveMode**.
2. Read the Terms and Conditions carefully, and then tap **I Accept**.
3. Read the text and tap **Continue**.
4. Follow the on-screen instructions.
5. Tap **OFF** to turn on Drive mode.

AT&T FamilyMap

View the location of your family members at any time with a monthly fee.

1. Tap  > **AT&T FamilyMap**.

① **Note** The first time you open this application, you need to download the updated application from the Play Store.

2. Enter your phone number and password, and then tap **Submit**.
3. Follow the on-screen instructions.

AT&T Locker

Store and share your contents in a cloud server.

1. Tap  > **AT&T Locker**.
- ① **Note** The first time you open this application, you need to download the updated application from the Play Store.
2. Tap **Sign In** and enter your user name and password.
 - Tap **Sign Me Up** if you do not have an AT&T account.
3. Follow the on-screen instructions.

AT&T Navigator

AT&T Navigator takes you to your destination with turn-by turn voice and on-screen driving directions.

1. Tap  > **AT&T Navigator**.
- ① **Note** To use this function, you must have a data plan.
2. Read the Terms and Conditions carefully, and then tap **Accept**.
3. Enter your phone number and tap **Continue**.
4. Follow the on-screen instructions.
- ① **Note** This application is an AT&T subscription service. To new AT&T Navigator customers, a 30 day free trial is provided. If you do not cancel the service until the trial period is over, you will be charged the monthly fee automatically.

AT&T Ready2Go

Ready2Go allows you to setup and personalize your phone by computer.

1. Tap  > **AT&T Ready2Go**.
2. Tap **Get Started**.
3. Follow the on-screen instructions.

AT&T Smart Wi-Fi

AT&T Smart Wi-Fi provides an easy way to manage your access to Wi-Fi Hot Spots.

1. Tap  > **AT&T Smart Wi-Fi**.
2. Read the License Agreement, and then tap **Accept**.
3. Select the auto-connect Wi-Fi hotspot option.

Option	Description
My Spots	Only enable near AT&T Wi-Fi hotspots and networks saved on your device.
Popular Hotspots	Only enable near AT&T Wi-Fi hotspots, saved networks, and other near hotspots.
Public Hotspots	Enable all public hotspots.

4. Manage your Wi-Fi hotspot connections.

Live TV

Watch live and on-demand TV shows on your phone.

1. Tap  > **Live TV**.

① **Note** The first time you open this application, you need to download the updated application from the Play Store.

2. Read the License Agreement, and then tap **Accept**.
3. Follow the on-screen instructions.

① **Note** This application is an AT&T subscription service.

Device Help

View videos and tutorials about how to use the functions of your phone.

1. Tap  > **Device Help**.
2. Select a web browser.
3. Select and tap an item.

YPmobile

Find local businesses and the best gas prices.

1. Tap  > **YPmobile**.
2. Read the License Agreement, and then tap **Accept**.
3. Tap **OK** to allow this function to use your current location.
4. Enter keywords to begin searching or tap one of the business categories.
5. Select and tap a result to view details.

myAT&T

myAT&T is an online account management application.

1. Tap  > **myAT&T**.

① **Note** The first time you open this application, you need to download the updated application from the Play Store.

2. Read the Terms and Conditions carefully, and then tap **Accept**.
3. Enter your wireless number and password, and then tap **Login**.
4. Follow the on-screen instructions.

Messages

AT&T Messages brings your calls, text messages, and voicemails together and synchronizes them across all devices.

1. Tap  > **Messages**.

① **Note** The first time you open this application, you need to download the updated application from the Play Store.

2. Tap **Record Greeting** to record a personal greeting.
 - Tap **Skip** to do it later.
3. Follow the on-screen instructions.

10

SETTINGS

Pantech Settings
Wireless & Networks
Device
Personal
System



PANTECH
P9090



SETTINGS

Pantech Settings

Change Experience

Change the home screen type.

1. Tap  > **Settings** > **Change Experience**.
2. Select an option.

Option	Description
Pantech Easy Experience	Streamlined, easy-to-use experience with: – One home screen for quick access to key functions. – Easy navigation with limited scrolling – Large text and buttons.
Pantech Standard Experience	User experience you can make your own with all the customization options that Android has to offer - widgets, shortcuts and more.

User Theme

Customize the lock screen and dial pad, and set default programs.

1. Tap  > **Settings** > **User theme**.
2. Select an option.

Option	Description
Screen lock	Select a lock screen type and lock screen wallpapers or select shortcuts on the lock screen.
Dialpad	Set a type of dial pad.
Default programs	Reset default programs for each application.

Wireless & Networks

Set and manage the wireless and network options.

Wi-Fi

1. Tap  > **Settings** > **Wi-Fi**.
2. Select an option by tapping it or .

Option	Description
Scan	Scan for networks.
Add network	Add a network.
Network notification	Notify when an open network is available.
Automatic connection	Automatically connect to AT&T Wi-Fi networks.
Keep Wi-Fi on during sleep	Set when to keep Wi-Fi on during sleep.
Wi-Fi Signal Filter	Filter Wi-Fi networks based on signal strength.
MAC address	View the MAC address.
IP address	View the IP address.
WPS connection	Set to connect to WPS-enabled devices by entering a PIN or pressing a button.

① **Note** The phone may not connect to a Wi-Fi network when the signal is weak, even if the **"Wi-Fi networks available"** message appears on the screen.

Bluetooth

1. Tap  > **Settings** > **Bluetooth**.
2. Select an option by tapping it or .

Option	Description
Search for devices	Search for Bluetooth devices.
Rename phone	Change the phone's Bluetooth name.
Visibility timeout	Set the length of time during which the phone is visible to other devices.
Show received files	View received files via Bluetooth.

Data Usage

1. Tap  > **Settings** > **Data usage**.
2. Select an option by tapping it or .

Option	Description
Mobile data	Turn on or off Mobile data.
Set mobile data limit	Set to disable mobile connection when the specified limit is reached.
Data usage cycle	Set the data usage cycle.
Data roaming	Turn on or off data roaming.

Option	Description
Restrict background data	Set to restrict background data.
Show Wi-Fi usage	Set to view the Wi-Fi usage.

Call Settings

1. Tap  > **Settings** > **Call settings**.
2. Select an option.

Option	Description
Fixed Dialing Numbers	Enable or disable Fixed Dialing Numbers (FDN). Change PIN for FDN access. Manage phone numbers list.
Volume Key Answer	Set to answer calls by pressing the Volume Up key.
Vicemail service	Select a voicemail service.
Vicemail settings	Configure voicemail settings.
In call option	Set to view the call status while you are on the phone.
Auto Redial	Turn on or off the auto redial option.
TTY mode	Set the teletypewriter (TTY) mode. ① Note To use the TTY mode, an earphone must be plugged into the earphone jack.
Caller ID	Choose how your Caller ID will be displayed.

SETTINGS

Option	Description
Call forwarding	Set call forwarding options.
Call barring settings	Set call barring options.
Call waiting	Set the phone to notify when there is an incoming call during another call.
Edit reject message	Create or delete the message that is sent when you reject a call.
Noise Suppression	Turn on or off the noise suppression option. This function allows you to hear clear sounds by suppressing background noise.

More...

1. Tap  > **Settings > More...**
2. Select an option.

Option	Description
Airplane mode	Set whether or not to use Wi-Fi and Bluetooth functions.
VPN	Set up and manage virtual private networks.
Tethering & portable hotspot	Set the phone to provide other devices with an mobile connection by becoming a Wi-Fi hotspot.
NFC	Set to use the NFC function to share contents.

Option	Description
Android Beam	Set to use Android Beam to share your contents wirelessly.
Wi-Fi direct	Turn on or off the Wi-Fi direct function.
Wi-Fi direct settings	Configure Wi-Fi direct settings.
Mobile networks	Enable data access over mobile networks. Turn on or off the international data roaming option. Set the access point name (APN). Select network operators.
SSLv2/SSLv3	Set the phone to use Secure Socket Layer (SSLv2 and SSLv3) protocols for secure network connections.

① Note

- If you turn on Airplane mode, wireless functions will be disabled. You can turn on the Wi-Fi function separately on an airplane that supports Wi-Fi service.
- Windows 2000 does not support the USB tethering function. On Windows XP, update the OS with Service Pack 3 (SP3) or later to use the USB tethering function. If you use Windows XP SP2 or the computer does not detect the USB tethering device, visit <http://support.microsoft.com/kb/959765>, click "**View and request hotfix downloads**", and then install the driver on the computer.

Device

Sound

Change various sound settings.

1. Tap  > **Settings** > **Sound**.
2. Select an option.

General Options

Option	Description
Sound Theme	Set ringtone, notification, screen lock, and alarm sounds.
Volumes	Set the volume for music, videos, games, and other media. Set the volume for ringtones and notifications. Set the volume for alarm sounds.
Silent mode	Set the silent mode to Off (default), Vibrate, or Mute.

Ringtone & Notifications

Option	Description
Phone ringtone	Set a ringtone for incoming calls.
Default notification	Set a ringtone for notifications.
Vibrate and ring	Set the phone to both vibrate and ring.

System

Option	Description
Dial pad touch tones	Set to emit a sound when you tap the dial pad.
Call connecting sound	Set to emit a sound when a call is connected.
Battery low tone	Set to emit a sound when the battery is low.
Touch sounds	Set to emit a sound when you tap the screen.
Screen lock tone	Set to emit a sound when you lock or unlock the screen.
Vibrate on touch	Set to vibrate when you touch some screens or Navigation buttons.

Display

Change various display settings.

1. Tap  > **Settings** > **Display**.
2. Select an option.

Option	Description
Brightness	Adjust the brightness of the screen or set the automatic brightness option.
Wallpaper	Set the wallpaper.
Auto-rotate screen	Make the screen rotate automatically when you rotate the phone horizontally or vertically.

SETTINGS

Option	Description
Sleep	Set the time delay for automatically turning off the screen when you perform no operations.
Font size	Adjust the font size.

Storage

View the storage information for the internal storage or SD card and mount or unmount an SD card.

1. Tap  > **Settings** > **Storage**.
2. Select an option.

Option	Description
Mount SD card/ Unmount SD card	Recognize an SD card inserted into the phone. Remove an SD card from the phone safely.
Erase SD card	Erase all data on the SD card.

USB Connection Settings

Manage settings for connecting the phone to the computer via USB.

1. Tap  > **Settings** > **USB connection settings**.
2. Select an option.

Option	Description
Media device (MTP)	Set to transfer media files between the phone and computer.
Camera (PTP)	Set to transfer photos from the phone to a computer.
External memory (SD card)	Set to use the SD card as external memory and transfer files between the SD card and computer.
PC data mode	Set to transfer files with computer tools.
Show settings when USB connected.	Set to view settings when connected via USB.
Tips	View tips on USB connection settings.

Battery

View the battery usage information of the phone.

1. Tap  > **Settings** > **Battery**.
2. View the battery usage.
 - Tap the check box at the upper-right of the screen to display the remaining battery life percentage on the notification bar.

Apps

View and manage applications installed on the phone.

1. Tap  > **Settings** > **Apps**.
2. Select an option.

Option	Description
Downloaded	Manage downloaded applications.
Running	Manage running applications.
All	Manage all applications.

Motion Recognition

Turn motion recognition on or off and configure the motion recognition settings.

1. Tap  > **Settings** > **Motion recognition**.
2. Select an option.

Option	Description
Motion recognition	Turn motion recognition on or off.
Instructions - how to use it	Learn how to use motion recognition.
Motion sensing will work in	Set options for motion recognition.

Personal

Accounts & Sync

Add a new account and manage the synchronizing options.

1. Tap  > **Settings** > **Accounts & sync**.
2. Tap an account.
3. Select an option by tapping it or .

Option	Description
DATA & SYNCHRONIZATION	Select items to synchronize automatically.
Remove account	Delete an account from the list.
Sync now	Start synchronizing.

- ① **Note** The synchronizing options that appear on the screen may differ depending on the type of account selected.

SETTINGS

Location Services

Set the options for location services.

1. Tap  > **Settings** > **Location services**.
2. Select an option.

Option	Description
Google's location service	Let applications use data from sources such as Wi-Fi and mobile networks to determine your approximate location.
GPS satellites	Let applications use GPS to pinpoint your location.
Location & Google Search	Let Google use your location to improve search results and other services.

Security

Manage security options.

1. Tap  > **Settings** > **Security**.
2. Select an option.

Screen Security

Option	Description
Screen lock	Select a screen lock type.
Lock detail settings	Select a lock screen type and lock screen wallpapers or select shortcuts on the lock screen.

① **Note** The screen security options that appear on the screen may differ depending on the type of screen lock selected.

Encryption

Option	Description
Encrypt phone	Require a PIN or password to decrypt the phone each time you turn it on.

SIM Card Lock

Option	Description
Set up SIM card lock	Lock or unlock the SIM card. Change the SIM PIN.

Passwords

Option	Description
Make passwords visible	Set whether or not to display the password entered.

Device Administration

Option	Description
Device administrators	View or deactivate phone administrators.
Unknown sources	Set to allow installation of non-market applications.

Credential Storage

Option	Description
Trusted credentials	View the list of trusted credentials and set whether or not applications will use the credentials.
Install from SD card	Install certificates from an SD card.
Clear credentials	Remove all certificates.

Language & Input

Set language and text input options.

1. Tap  > **Settings** > **Language & input**.
2. Select an option.

General Options

Option	Description
Language	Set a language for the display text.
Spelling correction	Set the automatic spelling correction option.
Personal dictionary	Manage word suggestions for entering text.

Keyboard & Input Methods

Option	Description
Default	Set a default keyboard.
Android keyboard	Configure the settings for the Android keyboard.
Google voice typing	Set to use Google Voice to Text function and configure the settings.
SwiftKey for Pantech	Configure the settings for the SwiftKey keyboard.

Speech

Option	Description
Voice search	Select a language for the voice search. Set the SafeSearch option. Hide offensive words in voice search results.
Text-to-speech output	Select the preferred TTS engine. Set speed at which the text is spoken. Play a short demonstration of speech synthesis.

SETTINGS

Mouse/Trackpad

Option	Description
Pointer speed	Adjust the pointer speed when using a Bluetooth device or other pointing device.

Backup & Reset

Set backup and reset options.

1. Tap  > **Settings** > **Backup & reset**.
2. Select an option.

Backup & Restore

Option	Description
Back up my data	Set to back up application data, Wi-Fi passwords, and other settings to Google servers.
Backup account	Add or select an account to back up data.
Automatic restore	Set to restore backed up settings and data when reinstalling an application.

Personal Data

Option	Description
Factory data reset	Erase all data on the phone.

System

Date & Time

Set date and time options.

1. Tap  > **Settings** > **Date & time**.
2. Select an option.

Option	Description
Automatic date & time	Set to use the network-provided time.
Automatic time zone	Set to use the network-provided time zone.
Set date	Set the current date manually.
Set time	Set the current time manually.
Select time zone	Select a time zone manually.
Use 24-hour format	Set to use the 24-hour format.
Select date format	Select a date display type.

Accessibility

Set the accessibility options to help people with physical challenges use the phone more easily.

1. Tap  > **Settings** > **Accessibility**.
2. Select an option.

Services

Option	Description
TalkBack	Turn on or off TalkBack, which provides spoken feedback to help blind or visually-impaired users.

System

Option	Description
Large text	Set to enlarge fonts on the screen.
Power button ends call	Set to end calls when you press the LOCK/PWR key.
Auto-rotate screen	Set the screen to rotate automatically when you rotate the phone.
Speak passwords	Set the phone to say passwords as you enter them.
Touch & hold delay	Adjust the recognition time for tapping and holding the screen.
Install web scripts	Set applications to install scripts from Google that make web content more accessible.

Developer Options

Set application development options.

1. Tap  > **Settings** > **Developer options**.
2. Select an option.

General Options

Option	Description
USB debugging	Set to activate the debug mode when the phone is connected to a computer via USB.
Development device ID	View the phone's development device ID.
Allow mock locations	Set the phone to send mock locations for testing.
Desktop backup password	Set a backup password.

User Interface

Option	Description
Strict mode enabled	Set the screen to flash when applications do long operations on a main thread.
Pointer location	Set to display the current touch data.
Show touches	Set to display a feedback for touches.

SETTINGS

Option	Description
Show screen updates	Set the updating area of the screen to flash.
Show CPU usage	Set to display the current CPU usage.
Force GPU rendering	Set to use 2D hardware acceleration in applications.
Window animation scale	Set a window animation scale.
Transition animation scale	Set a transition animation scale.

Apps

Option	Description
Don't keep activities	Set to clear activity history as soon as an application ends.
Background process limit	Set a limit for background processes.
Show all ANRs	Set to show a pop-up window when background applications do not respond.

Setup Wizard

Specify basic information, such as language, network connection, location service, and account when you turn on the phone for the first time.

1. Tap  > **Settings** > **Setup wizard**.
2. Select and tap a language, and then tap **START**.
3. Tap **Connect to Wi-Fi network**, and then select and tap an available Wi-Fi network.
 - Tap **Skip**, and go to step 6 to connect to the network later.
4. Follow the necessary steps, and then tap **Next**.
5. Tap **Add a Google Account** to set up a Google account, and then follow the necessary steps.
 - Tap **Skip** to skip this step.
6. Tap **Location service** to use Google location.
 - Go to step 7 if you do not want to use Google location.
7. Tap **Finish**.

AT&T Software Update

Check and update your software without visiting the dealer.

1. Tap  > **Settings** > **AT&T software update**.
2. Select an option.

Option	Description
Check for updates	Check for software updates.
Continue update	Resume a postponed software update.

- ① **Note** After downloading the software, the phone will ask you to update the software immediately. If you choose to update the software immediately, the phone will restart. If you postpone updating the software, you can select to be reminding in 1 hour, 4 hours, or 8 hours in Options. After selecting an option, you will be sent back to standby mode. To resume an update, tap **Continue update**.

About Phone

View general information of your phone.

1. Tap  > **Settings** > **About phone**.
2. Select an option.

Option	Description
Status	View the battery status, battery level, network, signal strength, mobile network type, service state, roaming, mobile network state, my phone number, IMEI, IMEI SV, IP address, Wi-Fi MAC address, Bluetooth address, serial number, and Up time.
Legal information	View the Open source licenses and Google legal information.
Model number	View the model number.
Android version	View the Android OS version.
Baseband version	View the baseband version.
Kernel version	View the kernel version.
Build number	View the build number.

11

APPENDIX

Cautions when Using External Memory Cards
Troubleshooting Checklist
Specifications
Caution
FCC Hearing-Aid Compatibility Regulations for Wireless Devices
FCC Regulatory Compliance
Limited Warranty
Legal Notice

PANTECH
P9090

Appendix

Cautions when Using External Memory Cards

- Unstable voltages may cause memory cards or the phone to malfunction.
- Avoid using or storing memory cards near strong magnetic fields or electrical noise.
- Avoid using or storing memory cards in areas with high temperature, high humidity, or corrosive substances.
- Do not bend, drop, or subject memory cards to heavy impact or pressure.
- Keep memory cards away from small children or pets.
- Memory cards may heat up after using the phone for an extended period time. This is normal and does not indicate a malfunction.
- Ensure that a memory card is inserted in the correct direction. Inserting a memory card in the wrong direction may cause a malfunction.
- This phone supports only microSD memory cards. Use the correct type of memory card.
- You cannot use a memory card when its lifespan has expired. In this case, use a new memory card.
- Handle all memory card carefully.
- Format a memory card only on your computer or the phone where it will be used.
- Do not remove the battery from the phone when a memory card is being used. This may corrupt the data or cause a malfunction. Pantech is not responsible for any loss of data.

- Your phone supports only microSD memory cards in sizes up to 32 GB. Some memory cards may not work on your phone depending on the capacity or manufacturer. Pantech does not guarantee the functionality or compatibility of memory cards.
- You can store photos, videos, documents, MP3 files, and more on a memory card. Ensure your memory card has enough available space. Your phone cannot recognize a memory card that is full.
- To remove a memory card from your phone safely, tap **Menu > Settings > Storage > Unmount SD card** or turn off the phone before removing the card.

Troubleshooting Checklist

When the audio quality is poor:

End the call and try again.

When the other party cannot hear you speaking:

Your phone may be set to mute. Disable the mute function. Ensure that your hand is not covering the microphone.

When battery life is shorter than usual:

This may happen when you are in an area with low signal strength. Turn off your phone when it is not in use. Change the battery when necessary.

When you cannot turn on your phone:

Make sure your battery is charged. Check to see if your phone works while recharging the battery.

When you are unable to send a message:

This may happen when you are not registered to receive SMS service, you may be in an area where your network service provider cannot provide such a service, your phone memory is full, or the Fixed Dialing Numbers function is set.

When you are unable to make a call:

Your phone may be set to "fixed dial." Cancel the "fixed dial" function. When you are unable to receive a call : Your phone may be set to "Call forwarding." Cancel the "Call forwarding" function.

When you are unable to charge the battery:

This may be the result of one of three cases:

1. Your charger may be out of order. Contact your nearest dealer.
2. You may be attempting to use the phone in an overly hot or cold environment. Try changing the charging environment.
3. Your battery may have not been connected to the charger properly. Check the connector.

When you are unable to input data into your Address Book:

Your Address Book's memory may be full. Delete some entries from your Address Book.

When you are unable to select a certain function:

You may not have subscribed to that function or you may be in an area where such service cannot be provided. Contact your local service provider.

Specifications

Design

Touch Candy Bar

Display

16M colors TFT LCD with 4.8" display,
720 x 1280(HD) pixel resolution

Melodies

AAC LC/LTP, AAC+, eAAC+, AMR-NB, AMR-WB, FLAC, MP3, MIDI, Vorbis, PCM/WAVE, WMA, E-AC3, DTS

Camera

Back: 12.6M CMOS Camera with AF (Auto Focus),

Front: 2M CMOS Camera

- Resolution up to 4096X3072 (12,582,912 pixels)
- Video Encoding up to 30fps; decoding up to 30fps
- Photo album and video album

Dimensions & Weight

- Weight: 135g (with battery pack)
- Dimensions: 134 x 69.4 x 8.98 mm (5.28" x 2.73" x 0.35")

Power Management (Performance)

Battery Type	Capacity	Standby Time	Talk Time
Standard Lithium-Ion (Li-ion)	2100mAh Typ. / 2050mAh Min.	Up to 250 hours	Up to 3 hours
Audio Playback time		Video Playback time	
Up to 22 hours		Up to 8 hours	

Operating Frequency

- GSM/GPRS/EDGE Quad(850/900/1800/1900) MHz, UMTS/HSPA+ Tri(850/1900/2100) MHz, LTE Quad(700/850/1900/AWS) MHz
- Automatic band switching
- The provided battery cover is specific for this device and no other approved covers are available.
- Do not use other battery covers with this device as they have not been tested.

Caution

In the United States, 5180 ~ 5240 MHz band is restricted to indoor-use only. Outdoor operation on this band is a strict violation of the FCC rules and can cause harmful interference to commercial radar communications. For outdoor operation, channels in 5180 ~ 5240 MHz band must not be used. If using automatic channel assignment, add channels in this band to the Automatic channel exclusion list.

FCC Hearing-Aid Compatibility Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require that digital wireless phones be compatible with hearing-aids.

The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users to find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box, or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

- **M-Ratings:** Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.
- **T-Ratings:** Phones rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. T4 is the better/higher of the two ratings.

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interference. Consult your service provider about its return and exchange policies and for information on hearing aid compatibility.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered best.



In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equals M5. This is synonymous for T ratings.

This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that is acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

To ensure that the Hearing Aid Compatibility rating for your phone is maintained, secondary transmitters such as Bluetooth and WLAN components must be disabled during a call. See the manual for instructions on how to disable these components.

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interference. Consult your service provider about its return and exchange policies and for information on hearing aid compatibility.

FCC Regulatory Compliance

FCC Regulatory Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Your mobile device is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for mobile devices. Those guidelines are consistent with safety standards previously set by both U.S. and international standards bodies: the American National Standard Institute (ANSI), the National Council of Radiation Protection and Measurements (NCRP), and the International Commission on Non-Ionizing Radiation Protection (ICNRP). These standards were based on comprehensive and periodic evaluations of the relevant scientific literature. The design of your phone complies with the FCC guidelines.

Statement according to FCC part 15.105

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Statement according to FCC part 15.21

Modifications not expressly approved by this company could void the user's authority to operate the equipment.

RF exposure FCC

For body worn operation, to maintain compliance with FCC RF exposure guidelines, use only accessories that contain no metallic components and provide a separation distance of 10 mm (0.39 inches) from the body. Use of other accessories may violate FCC RF exposure guidelines and should be avoided.

This device and its antenna must not be co-located or operated in conjunction with any other antenna or transmitter.

Health and Safety Information FCC

This EUT has been shown to be capable of compliance with the localized specific absorption rate (SAR) for uncontrolled environment/general population exposure limits specified in ANSI/IEEE Std. C95.1-1992 and has been tested in accordance with the measurement procedures specified in FCC/OET Bulletin 65 Supplement C (2001) and IEEE Std. 1528-2003 Ministry of Health (Canada), Safety Code 6. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg *.

* In the U.S. and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in.

** This device contains 1800 MHz GSM functions that are not operational in U.S. Territories; this filing is applicable only for 850 MHz GSM and 1900 MHz PCS operations.

Limited Warranty

Protect Your Warranty

Read your Warranty carefully, with special consideration to paragraph seven of the Limited Warranty for your unit:

“Warranty does not apply to... or to any product or part thereof which has suffered through alteration... mishandling, misuse, neglect or accident.”

Many companies are making look-alike accessories and in some cases, claiming that their product is equal to or better than the Pantech product. Exercise caution—some of these products may not be compatible for use with your Pantech product and may damage the unit or cause it to malfunction.

If service is required on your unit and it is determined that a non-Pantech accessory has created the problem, the Warranty will not apply. In addition, if the unit has already suffered irreversible damage due to use of a non-compatible accessory, the Warranty will be voided. To protect your Warranty, use only compatible accessories that cannot damage or interfere with the functionality of your Pantech product.

12-Month Limited Warranty

Pantech Wireless, Inc. (the Company) warrants to the original retail purchaser of this Pantech handheld portable cellular telephone, that should this product or any part thereof, during normal consumer usage and conditions, be proven defective in material or workmanship that results in product failure within the first twelve (12) month period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s).

The antenna, key pad, display, rechargeable battery and battery charger, if included, are similarly warranted for twelve (12) months from the date of purchase. This Warranty extends only to consumers who purchase the product in the United States or Canada and it is not transferable or assignable.

This warranty does not apply to:

- (a) Products subjected to abnormal use or conditions, accidents, mishandling, neglect, unauthorized alterations, misuse, improper installations or repairs or improper storage;
- (b) Products whose mechanical serial numbers or electronic serial numbers have been removed, altered or defaced;
- (c) Damages from exposure to moisture, humidity, excessive temperatures or extreme environmental conditions;
- (d) Damages resulting from connection to, or use of any accessory or other product not approved or authorized by the Company;
- (e) Defects in appearance or cosmetic, decorative or structural items, such as framing and non-operative parts;

- (f) Products damaged by external causes such as fire, flooding, dirt, sand, weather conditions, battery leakage, blown fuses, theft or improper usage of any electrical source.

The Company disclaims liability for removal or reinstallation of the product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the cellular system as a whole.

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of Warranty coverage (e.g., a dated bill of sale), the consumer's return address, a daytime phone number and/or fax number and complete description of the problem, with all postage prepaid, to the Company. Call the number listed below or the place of purchase for repairs or replacement processing.

To locate your Pantech Authorized Service Center, call: (800) 962-8622 or email HandsetHelp@Pantech.com.

To locate Pantech Authorized Service Center, call: (800) 962-8622 or email HandsetHelp@Pantech.com.

Please have the following information available when you send the phone in for repair:

- A valid, original Proof of Purchase
- Return address
- Daytime phone number or fax number
- Model #
- IMEI # (look for the 15 digit IMEI # behind battery)
- Complete description of the problem
- Prepaid postage (both ways)

Other Warranty Program

You may have another warranty program with your purchase, such as a warranty exchange. If so, please refer to your equipment package or the original point of sale.

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED AS ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER FOR THE PRODUCT.

ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY MUST BE BROUGHT WITHIN A PERIOD OF 18 MONTHS FROM THE DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. THE COMPANY SHALL NOT BE LIABLE FOR DELAY IN RENDERING SERVICE UNDER THIS WARRANTY OR LOSS OF USE DURING THE TIME THE PRODUCT IS BEING REPAIRED OR REPLACED.

No person or representative is authorized to assume for the Company any liability other than that expressed herein in connection with the sale of this product.

Some states or provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage, so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

Appendix

For technical support in the U.S. & Canada, call (800) 962-8622, email HandsetHelp@Pantech.com, or visit our web site (www.pantechusa.com). For all other inquiries, write to:

PANTECH WIRELESS, INC.

5607 Glenridge Dr. Suite 500

Atlanta, GA

USA 30342

Legal Notice

Bluetooth is a trademark of Bluetooth SIG, Inc. Wi-Fi is a trademark of the Wi-Fi Alliance. Google, YouTube, Picasa, Gmail, Google Maps and Android Market are trademarks of Google, Inc.